

Follow the Severe Conditions Maintenance Schedule if the car is driven MAINLY under one or more of the Severe Driving Conditions (page 4-7):

Service at the indicated distance or time-whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	SECTION and PAGE *2
	miles x 1,000	15	30	45	60	75	90	105		
	months	12	24	36	48	60	72	84		
Replace engine oil and oil filter	Replace every 6,000 km (3,750 miles) or 6 months								Capacity for change with filter: 4.5 ℓ (4.7 US qt, 4.0 Imp qt)	8-4, 5
Check engine oil and coolant	Check oil and coolant at each fuel stop								Check levels and check for leaks.	8-4, 10-5
Clean (○) or replace (●) air cleaner element	○ ● ○ ● ○ ● ○									11-127
Replace spark plugs	Replace every 96,000 km (60,000 miles) or 72 months								Sedan L, LS NGK: PFR6G-11, NIPPONDENSO: PK20PR-L11 Sedan GS, Coupe NGK: PZR6E-11, NIPPONDENSO: PK20CR-L11 Gap: 1.0 – 1.1 mm (0.039 – 0.043 in) Service Limit: 1.3 mm (0.051 in)*1	23-110
Replace timing belt*, and inspect water pump	Replace every 96,000 km (60,000 miles)									6-31, 34 10-10
Inspect and adjust drive belts	● ● ●								Check for cracks and damage. Check deflection and tension at center of Alternator and P/S belts pressing with 98 N (10 kgf, 22 lbf) tension: Alternator drive belt: 9.5 – 11.5 mm (0.37 – 0.45 in) P/S pump belt: 11.5 – 13.5 mm (0.45 – 0.53 in)	17-17 23-122
Replace fuel filter*	●								The rubber fuel hoses need periodic replacement since they are subject to cracks and deterioration during a long period of use.	11-118
Inspect idle speed*	●								M/T: Sedan L, LS 650 ± 50 rpm Sedan GS, Coupe 680 ± 50 rpm A/T: Sedan L, LS 600 ± 50 rpm (N) or (P) position) Sedan GS, Coupe 630 ± 50 rpm (N) or (P) position)	11-103
Inspect PCV valve	●								If clicking sound is heard as you pinch the hose between the PCV valve and intake manifold, valve is OK.	11-151
Replace engine coolant	● ● ●								Capacity for change: Manual transmission: 7.7 ℓ (8.1 US qt, 6.8 Imp qt) Automatic transmission: 7.6 ℓ (8.0 US qt, 6.7 Imp qt) Check specific gravity for freezing point.	10-5
Replace transmission fluid	● ● ● ● ● ● ●								Manual transmission: 2.3 ℓ (2.4 US qt, 2.0 Imp qt) for change Automatic transmission: 3.3 ℓ (3.5 US qt, 2.9 Imp qt) for change with HONDA Premium Formula ATF or DEXRON II ATF	13-4 14-85
Replace front differential fluid	● ● ● ● ● ● ●								1.05 ℓ (1.11 US qt, 0.92 Imp qt) for change Hypoid gear oil classified GL4 or GL5	15-4
Inspect front and rear brakes	Inspect every 12,000 km (7,500 miles) or 5 months								• Check the brake pad and disc thickness. Check for damage or cracks. • Check the wheel cylinder for leaks. • Check the brake linings for cracking, glazing, wear or contamination. • Check the calipers for damage, leaks and tightness.	19-7, 11 19-18, 28
Replace brake fluid (Including ABS)	● ● ● ● ●								Use only DOT3 or DOT4 fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-11
Replace ABS high pressure hose	● ● ● ● ●								Bleed high pressure fluid.	19-77
Check parking brake adjustment	● ● ● ● ● ● ●								Fully engaged 6 to 8 clicks.	19-4
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 12,000 km (7,500 miles)								The suggested rotation method is shown in the diagram of the Owner's Manual.	—

*1: Do not adjust the gap, replace the spark plug if it is out of service limit.

*2: Refer to Base Service Manuals ('94 Legend (Sedan) Service Manual, P/N 61SP003, and '94 Legend Coupe Service Manual, P/N 61SP103).

Service at the indicated distance or time-whichever comes first.	km x 1,000	24	48	72	96	120	144	168	NOTE	SECTION and PAGE *2							
	miles x 1,000	15	30	45	60	75	90	105									
	months	12	24	36	48	60	72	84									
Visually inspect the following items:									<ul style="list-style-type: none">• Check for correct installation and position, check for cracks, deterioration, rust, and leaks.• Check tightness of screws, nuts, and joints. If necessary, retighten.	—							
Tie-rod ends, steering gear box, and boots	Every 12,000 km (7,500 miles) or 6 months								<ul style="list-style-type: none">• Check rack grease and steering linkage.• Check the boot for damage or leaking grease.• Check the fluid line for damage and leaks.	17-65							
Suspension components										—							
Driveshaft boots									Check boots and boot band for cracks. Check rack grease.								16-3
Brake hoses and lines																19-29	
All fluid levels									Check levels and check for leaks. If necessary, add transmission fluid, engine coolant, brake fluid, clutch fluid, windshield washer fluid, power steering fluid.	10-5 13-4 14-85, 19-11							
Cooling system hoses and connections	●	●	●	●	●	●	●	●	Check all hoses for damage, leaks or deterioration. Check all hose clamps. Retighten if necessary.	10-2, 3							
Exhaust system *									Check the catalytic converter heat shield, exhaust pipe and muffler for damage, leaks and tightness.	9-4 11-143, 144							
Fuel pipes, hoses, and connections *									Check fuel lines for loose connections, cracks and deterioration. Retighten loose connections and replace any damaged parts.	11-4							
Inspect supplemental restraint system	10 years after production									—							

*2: Refer to Base Service Manuals ('94 Legend (Sedan) Service Manual, P/N 61SP003, and '94 Legend Coupe Service Manual, P/N 61SP103).

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk (*) will not void customer's emission warranties. However, Acura recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Severe Driving Conditions:

- Driving less than 8 km (5 miles) per trip or, in freezing temperatures, driving less than 16 km (10 miles) per trip.
- Driving in extremely hot [over 90°F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If the car is driven OCCASIONALLY under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule on pages 4-4 and 4-5.

