





# Power Mirrors

## Power Mirror Actuator Replacement (Sedan)

1. Insert a No. 2 Phillips screwdriver through the service hole in the bottom of the mirror housing. Loosen the actuator retaining screw, but do not remove it.

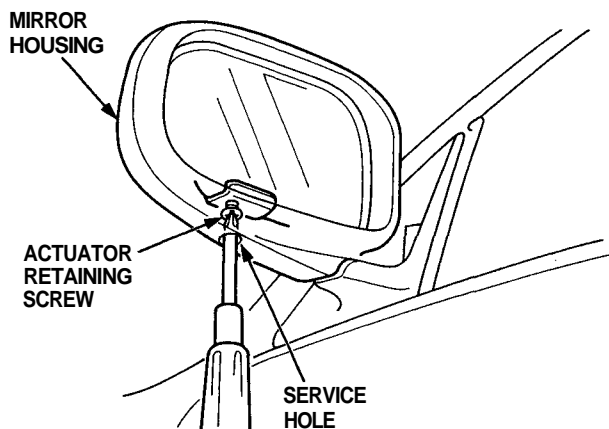


2. Remove the mirror and actuator assembly from the housing. Disconnect the electrical connectors.
3. Place the mirror on a flat, padded surface. Pull up on the spring-loaded lug, and remove the roll pin.

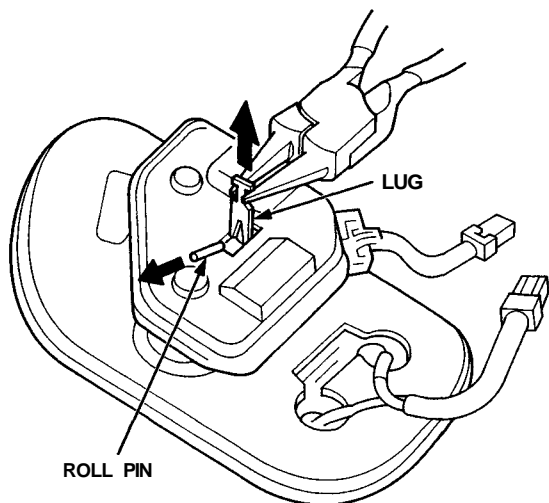

4. Separate the actuator from the mirror. If the actuator shafts do not come off with the actuator, pry them out of their sockets.
5. Discard the actuator and shafts.

6. Install the new actuator on the back of the mirror with the lug protruding through the middle. Pull up on the lug, and install the roll pin removed in step 3.
7. Install the actuator shafts in the sockets on the mirror.

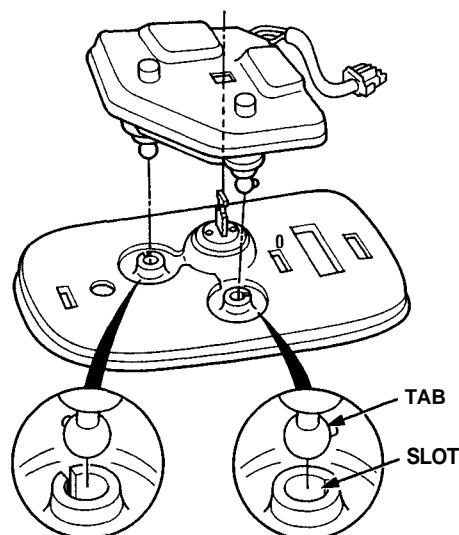

8. Reconnect the electrical connectors. Install the mirror and actuator assembly in the housing.
9. Tighten the actuator retaining screw.
10. Test the mirror's operation.