


Entry Light Control System (Sedan)

Driver's Door Outside Handle Switch Test

1. Remove the driver's door panel (see [section 20](#)).
 2. Disconnect the 8-P connector from the outside handle switch.
 3. Check continuity between the No. 5 and No. 6 terminals.
- There should be continuity when the outside handle is pulled.
 - There should be no continuity when the outside handle is released.

DRIVER'S DOOR OUTSIDE HANDLE SWITCH

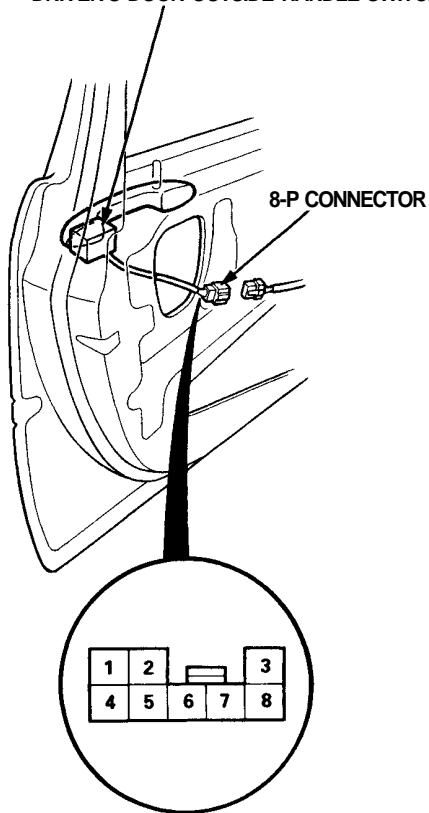

View from wire side

Power Door Locks (Sedan)

Door Key Cylinder Switch Test

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 3-P connector from the actuator.
3. Check for continuity between the "A" and "B" terminals of the door key cylinder switch with the door locked.

NOTE:

- Front passenger's door is shown, driver's door is similar.
- "C" terminal is not used.

View from terminal side

