

Security Alarm System (Sedan)

Description

This system is activated automatically 15 seconds after everything has been closed and locked. The security alarm system indicator light located on the driver's side door panel will flash after the doors are properly locked.

If any of the following conditions occur, the horns will sound, the headlights will flash, and the side marker lights, parking lights, and taillights will flash for about two minutes, or until the system is disarmed by unlocking either door from the outside with the key.

- ① Door lock key cylinder is pushed or pulled out.
- ② Door is opened forcibly.
- ③ Trunk lid is opened without using the key.
- ④ Hood is opened.
- ⑤ Battery terminal(s) are removed and reconnected.
- ⑥ Engine starter circuit and battery circuit are bypassed by breaking the ignition switch.
- ⑦ Hood/trunk lid opener in the vehicle is operated.

Flowchart of the security alarm system operation:



