

# Security Alarm System (Sedan)

## Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		In the under-dash fuse/relay box		In the under-hood fuse/relay box																
		Blown No. 15 (7.5A) fuse	Blown No. 20 (7.5A) fuse	Blown No. 39 (20A) fuse	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: A/T gear position switch M/T: Clutch interlock switch	Lighting system	Door key switch	Ignition key switch	Trunk key cylinder switch	Trunk latch switch	Hood switch	Door switch	Door lock cylinder tamper switch	Control unit input	Poor ground	Open circuit, loose or disconnected terminals	
Symptom																				
Security alarm can't be set (and indicator light does not flash).		1	2	3	4						5						6	G301 G302 G303	YEL/BLU, BLK/RED, WHT/GRN, GRN/RED <sup>4</sup> or BLU/WHT WHT/RED RED/WHT	
Starting system is not operated.							1	2									3	G301 G302 G303	BLK/WHT(BLU) or BLK/YEL (BLU): M/T	
Security alarm can be set, but alarm does not operate when the trunk, hood or either door is unlocked without the key.	Horn alarm			1	2												3		WHT/GRN, BLU, or BLU/RED <sup>1</sup>	
	Head-light alarm								1								2		BLU/RED <sup>2</sup> or RED/GRN	
	Both alarms																1			
Alarm not cancelled when the door is opened with the key.										1							2	3	G301 G302 G303	GRN/RED <sup>2</sup> or GRN/BLU <sup>1</sup> , GRN/BLK or BLU/RED <sup>3</sup> WHT/RED RED/WHT
Alarm not cancelled when the trunk lid is opened with the key.												1	2				3	G451	GRN/RED <sup>1</sup> or BLU/GRN	
Alarm does not operate when the hood is opened.														1			2	G153	YEL/RED	
Alarm does not operate when the door is opened.															1		2	G301 G302 G303 G304 G251	GRN/BLU <sup>2</sup> or GRN/RED <sup>3</sup> , or GRN/YEL <sup>2</sup> or GRN/WHT <sup>1</sup>	