


Security Alarm System (Sedan)

Door Unlock Key Switch Test

Driver's Side:


1. Remove the door panel (see [section 20](#)).
2. Disconnect the 8-P connector from the outside handle switch.
3. Check for continuity between the No. 2 and No. 3 terminals of the door unlock key switch.

DRIVER'S DOOR OUTSIDE HANDLE SWITCH

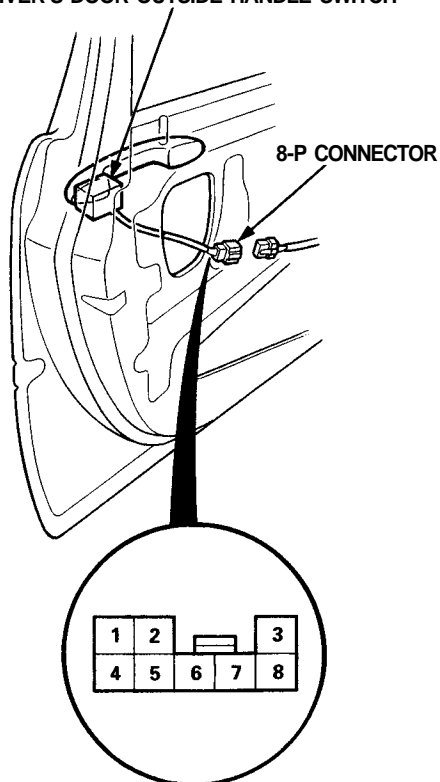

View from wire side


NOTE: The door unlock key switch is built into the outside handle switch.

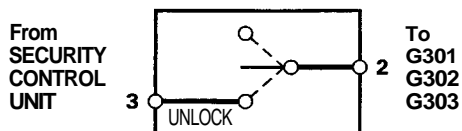

Front Passenger's Side:

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 4-P connector from the outside handle switch.
3. Check for continuity between the "A" and "B" terminals of the door unlock key switch.

FRONT PASSENGER'S OUTSIDE HANDLE SWITCH

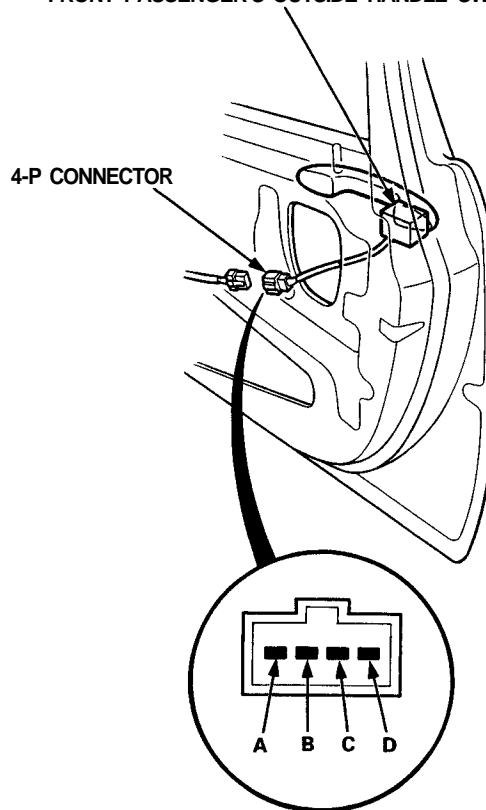

View from terminal side

NOTE: The door unlock key switch is built into the outside handle switch.

