




## Door Lock Cylinder Tamper Switch Test

### Driver's Side:


1. Remove the door panel (see [section 20](#)).
2. Disconnect the 8-P connector from the outside handle switch.
3. Check that there is no continuity between the No. 1 and No. 4 terminals of the door lock cylinder tamper switch.

DRIVER'S DOOR OUTSIDE HANDLE SWITCH

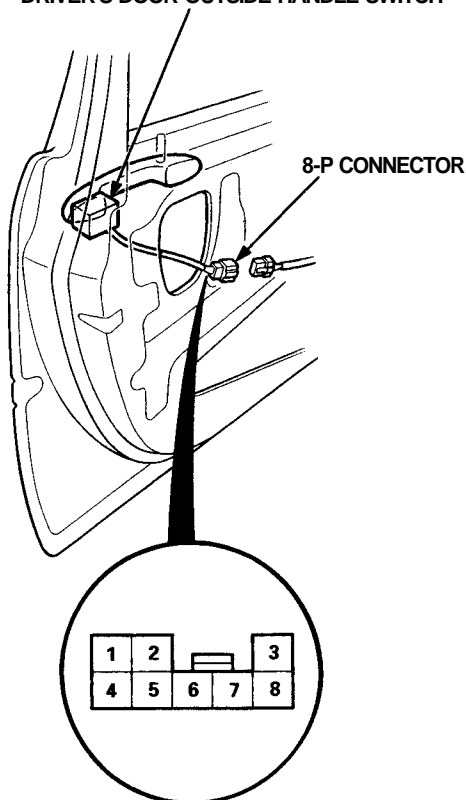

View from wire side


NOTE: The door lock cylinder tamper switch is built into the handle switch.

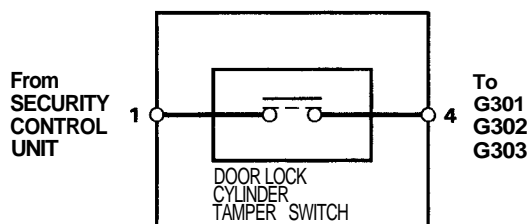

### Front Passenger's Side:

1. Remove the door panel (see [section 20](#)).
2. Disconnect the 4-P connector from the outside handle switch.
3. Check that there is no continuity between the "C" and "D" terminals of the door lock cylinder tamper switch.

FRONT PASSENGER'S OUTSIDE HANDLE SWITCH

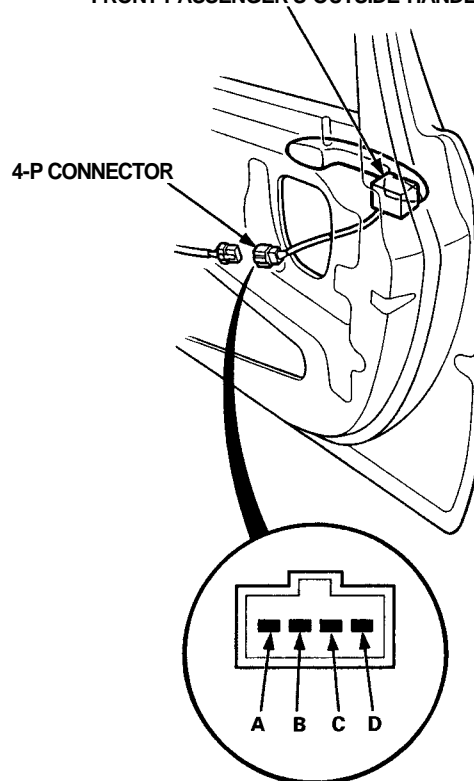

View from terminal side

NOTE: The door lock cylinder tamper switch is built into the handle switch.

