


# Warning/Caution Label Locations




SRS CAUTION LABELS: Refer to page 1-6.

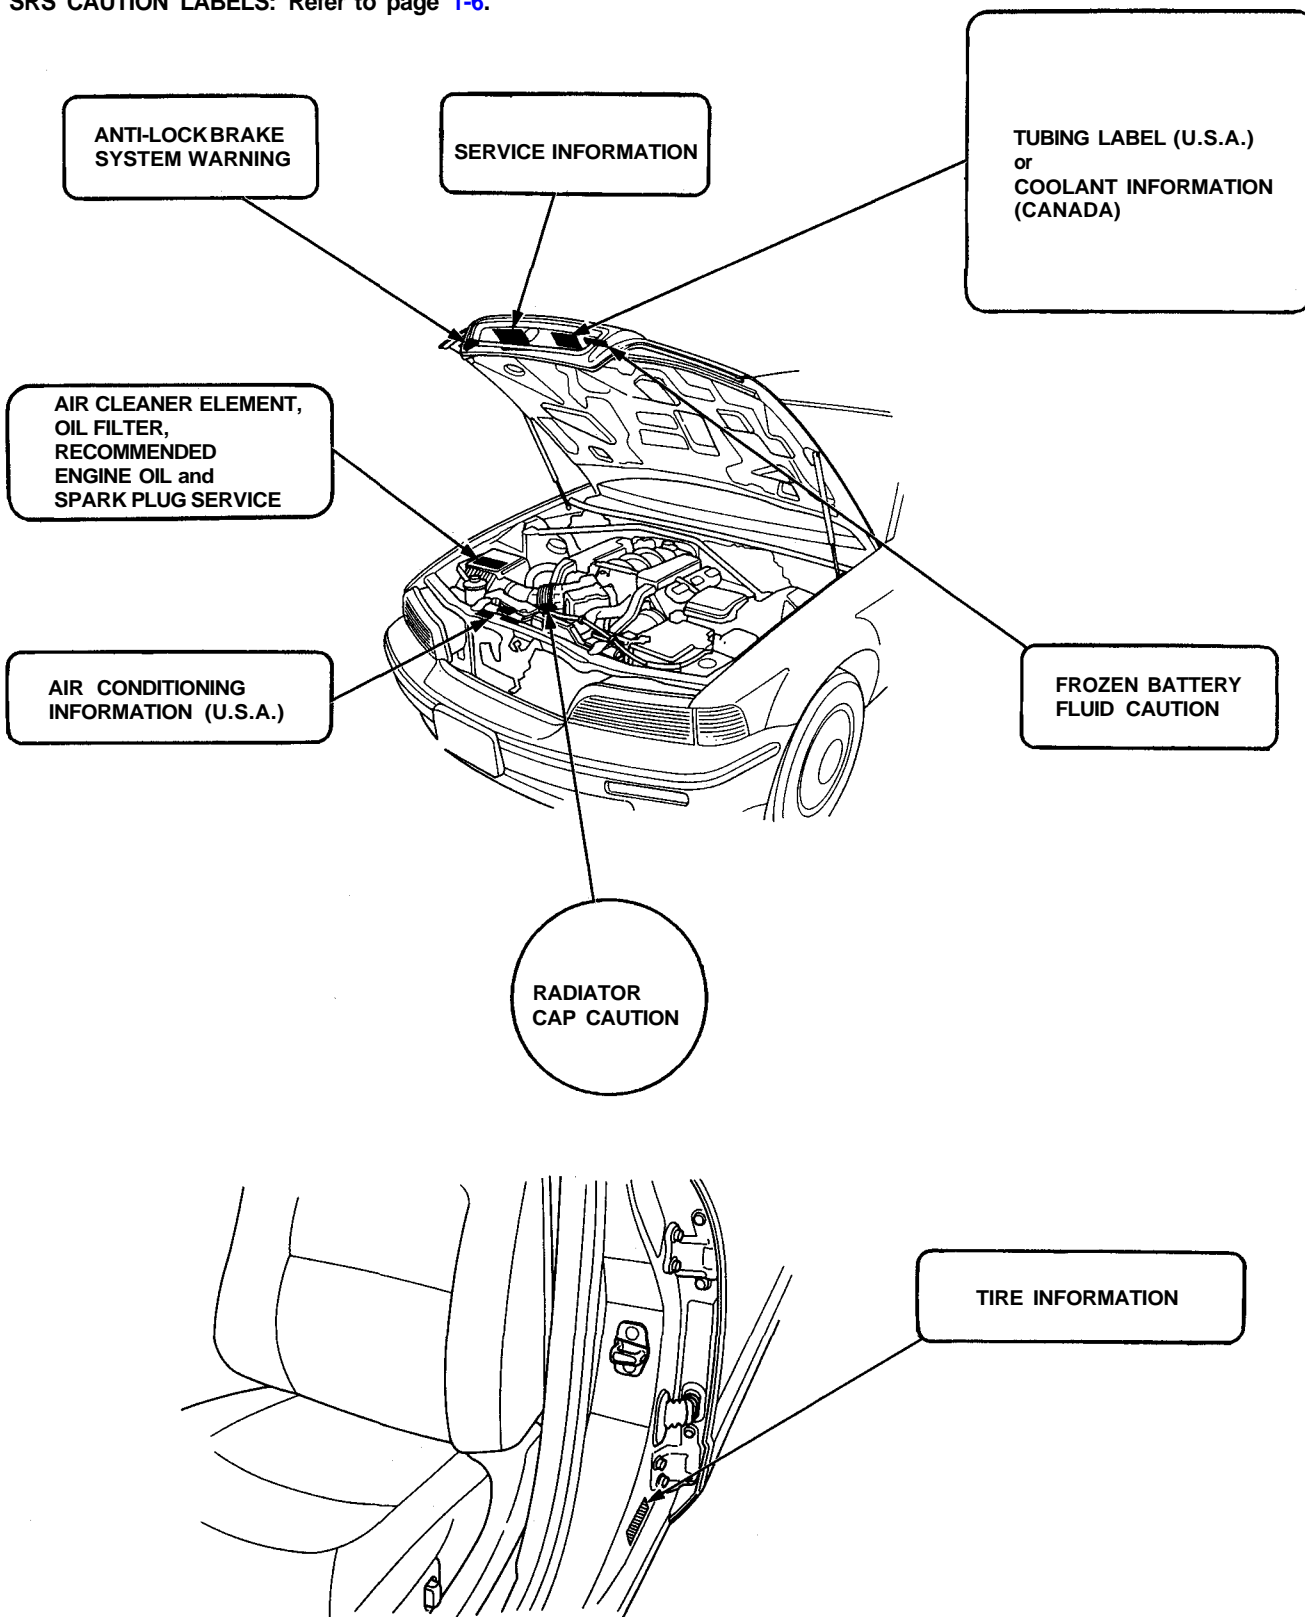

(cont'd)

# Warning/Caution Label Locations

(cont'd)

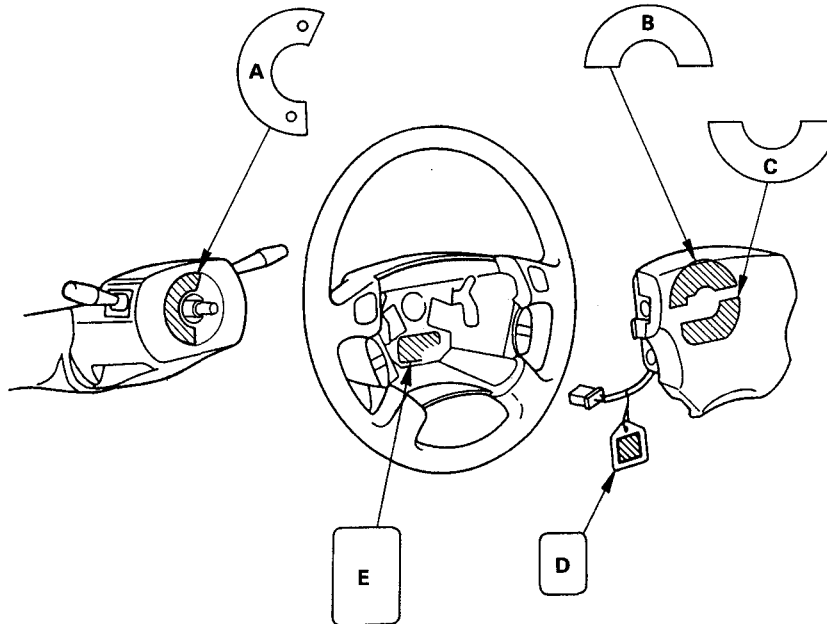

## A: CABLE REEL CAUTION A

**SRS**

REFER TO SERVICE MANUAL FOR DETAILED INSTRUCTIONS.

## B: DRIVER MODULE DANGER

### ⚠ DANGER

#### EXPLOSIVE/FLAMMABLE

CONTACT WITH ACID, WATER OR HEAVY METALS SUCH AS COPPER, LEAD OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE AND DISPOSAL PROCEDURES REFER TO SERVICE MANUAL, SRS SUPPLEMENT.

#### POISON

CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.

#### FIRST AID

IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR. IN EVERY CASE, GET PROMPT MEDICAL ATTENTION. KEEP OUT OF REACH OF CHILDREN.

## C: DRIVER MODULE WARNING

### ⚠ WARNING

THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.

- DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES. THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
- NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
- PLACE AIRBAG UPRIGHT WHEN REMOVED.
- FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

## D: DRIVER INFLATOR WARNING TAG


### ⚠ WARNING

ACCIDENTAL AIRBAG DEPLOYMENT CAN SERIOUSLY HURT OR KILL YOU. INSTALL THE RED SERVICE CONNECTOR WHEN THE INFLATOR HARNESS IS DISCONNECTED.

## E: STEERING WHEEL NOTICE

### NOTICE

IMPROPER STEERING WHEEL REMOVAL OR INSTALLATION CAN DAMAGE SRS COMPONENTS. FOLLOW SERVICE MANUAL INSTRUCTION CAREFULLY.

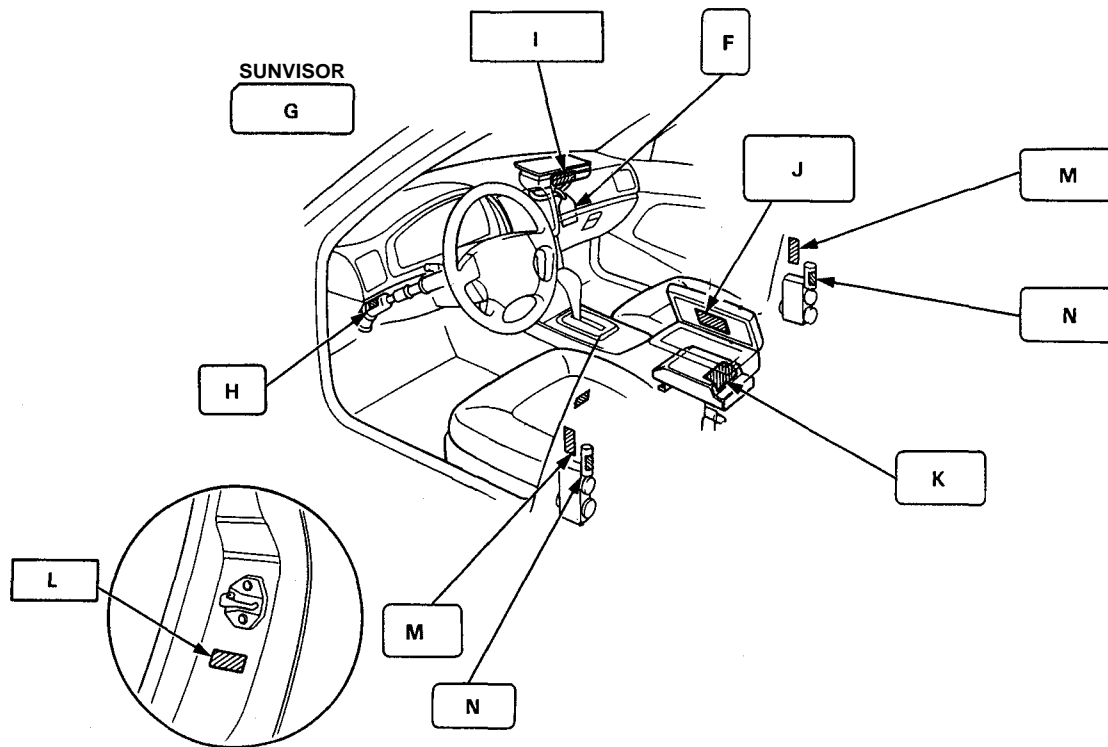

**F: FRONT SEAT PASSENGER INFLATOR WARNING TAG**

**⚠ WARNING**  
ACCIDENTAL AIRBAG DEPLOYMENT CAN SERIOUSLY HURT OR KILL YOU.  
INSTALL THE RED SERVICE CONNECTOR WHEN THE INFLATOR HARNESS IS DISCONNECTED.

**G: DRIVER INFORMATION**

**[SRS] ALWAYS WEAR YOUR SEAT BELT**

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AND A FRONT SEAT PASSENGER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS).
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- BEFORE DRIVING READ LABEL INSIDE THE CONSOLE BOX.

**H: STEERING COLUMN NOTICE**

**NOTICE**  
TO PREVENT SRS DAMAGE, REMOVE STEERING WHEEL BEFORE REMOVING STEERING SHAFT CONNECTING BOLT.

**I: FRONT SEAT PASSENGER AIRBAG MODULE COVER LABEL**

**⚠ DANGER**  
**EXPLOSIVE/FLAMMABLE**  
CONTACT WITH ACID. WATER OR HEAVY METALS SUCH AS COPPER, LEAD OR MERCURY MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS. STORAGE TEMPERATURES MUST NOT EXCEED 200°F (100°C). FOR PROPER HANDLING, STORAGE, AND DISPOSAL PROCEDURES REFER TO SERVICE MANUAL. SRS SUPPLEMENT.

**POISON**  
CONTAINS POISONOUS SODIUM AZIDE AND POTASSIUM NITRATE.

**FIRST AID**  
IF CONTENTS ARE SWALLOWED, INDUCE VOMITING. FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES. IF GASES (FROM ACID OR WATER CONTACT) ARE INHALED, SEEK FRESH AIR. IN EVERY CASE, GET PROMPT MEDICAL ATTENTION.  
KEEP OUT OF REACH OF CHILDREN.

**⚠ WARNING**  
THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT OR KILL YOU.

- DO NOT USE ELECTRICAL TEST EQUIPMENT OR PROBING DEVICES. THEY CAN CAUSE ACCIDENTAL DEPLOYMENT.
- NO SERVICEABLE PARTS INSIDE. DO NOT DISASSEMBLE.
- PLACE AIRBAG UPRIGHT WHEN REMOVED.
- FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.

(cont'd)

# Warning Caution Label Locations

(cont'd)

## J: SRS CONSOLE LABEL

### AIRBAG INFORMATION

#### SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

- THE SRS MUST BE INSPECTED TEN YEARS AFTER IT IS INSTALLED. THE DATE OF INSTALLATION IS SHOWN ON THE CERTIFICATION PLATE. LOCATED ON THE DRIVER'S DOORJAMB.
- DIAGNOSTIC CHECKS AND REPLACEMENT OF SRS COMPONENTS MUST BE DONE BY AN AUTHORIZED DEALER.
- SEE YOUR OWNER'S MANUAL FOR ADDITIONAL SRS INFORMATION.

## K: MONITOR NOTICE

### NOTICE: **SRS**

- NO SERVICEABLE PARTS INSIDE.
- REFER TO SERVICE MANUAL FOR DETAILED INSTRUCTIONS.

## L: LABEL

### **AIRBAG**

## M: PRETENSIONER ELR LABEL

### ⚠ WARNING

#### EXPLOSIVE MATERIAL INSIDE


YOU CAN BE SERIOUSLY HURT OR BURNED.

- INSTALL RED SHORT CONNECTOR WHEN WIRE HARNESS IS DISCONNECTED.
- DO NOT TAMPER OR DISASSEMBLE. NO SERVICEABLE PARTS INSIDE.
- USE ONLY APPROVED ELECTRICAL TESTERS FOR CIRCUIT DIAGNOSIS.
- REFER TO SERVICE MANUAL FOR COMPLETE INSTRUCTIONS.

## N: PRETENSIONER POWER SOURCE CAUTION

### SEAT BELT TENSIONER

DO NOT TAMPER, REFER TO SERVICE MANUAL FOR COMPLETE INSTRUCTIONS.

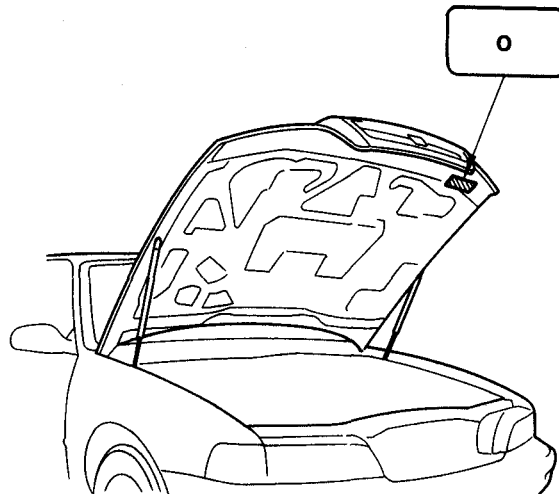

## O: SRS WARNING (HOOD)

### SUPPLEMENTAL RESTRAINT SYSTEM [SRS]

THIS VEHICLE IS EQUIPPED WITH DRIVER AND FRONT SEAT PASSENGER AIRBAGS AND FRONT SEAT BELT TENSIGNER SYSTEMS.

ALL SRS ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.

TAMPERING WITH, DISCONNECTING OR USING ELECTRICAL TEST EQUIPMENT ON THE SRS WIRING CAN MAKE THE SYSTEM INOPERATIVE OR CAUSE ACCIDENTAL FIRING OR THE INFLATOR.

### ⚠ WARNING

THE AIRBAG INFLATOR IS EXPLOSIVE AND, IF ACCIDENTALLY DEPLOYED, CAN SERIOUSLY HURT YOU. FOLLOW SERVICE MANUAL INSTRUCTIONS CAREFULLY.