

R—Replace I—Inspect After inspection, clean, adjust, repair or replace if necessary.

Maintenance item	Service at the interval listed x 1,000 miles (or km) or after that number of months, whichever comes first.															NOTE	SEC and PAGE
	x 1,000 miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105		
	x 1,000 km	12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84		
Engine and Transmission																	
<input type="checkbox"/> Air cleaner element					<input checked="" type="checkbox"/> R				<input checked="" type="checkbox"/> R					<input checked="" type="checkbox"/> R			11-127
Idle speed																Manual transmission: 650 ± 50 rpm* ⁵ 680 ± 50 rpm* ⁶ Automatic transmission: 600 ± 50 rpm* ⁵ 630 ± 50 rpm* ⁶ (<input checked="" type="checkbox"/> N or <input checked="" type="checkbox"/> P position)	11-103
Positive crankcase ventilation valve									I							If clicking sound is heard as you pinch the hose between the PCV valve and intake manifold, valve is OK.	11-151
Fuel filter									R* ¹							The rubber fuel hoses need periodic replacement since they are subject to cracks and deterioration during a long period of use.	11-118
Fuel pipes, hoses, and connections						I* ¹				I* ¹				I* ¹		Check fuel lines for loose connections, cracks and deteriorations. Retighten loose connections and replace any damaged parts.	11-4
Spark plugs									R* ²							NGK: PFR6G-11* ⁵ , PZFR6F-11* ⁶ NIPPONDENSO: PK20PR-L11* ⁵ , PKJ20CR-L11* ⁶ Standard gap: 1.0–1.1 mm (0.039–0.041 in) Service limit: 1.3 mm (0.051 in)* ⁷	23-110
<input checked="" type="checkbox"/> Engine oil	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	Capacity for change with filter: 4.5 ℓ (4.7 US qt, 4.0 Imp qt)	8-4
<input checked="" type="checkbox"/> Engine oil filter	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R	<input checked="" type="checkbox"/> R		8-5
Alternator drive belt					I				I					I		9.5–11.5 mm (0.37–0.45 in) with 100 N (10 kg, 22 lbs) tension	23-122
Cooling system hoses and connections					I* ¹				I* ¹					I* ¹			10-2
• Engine coolant							R				R				R* ³	Capacity for change: Manual transmission: 7.7 ℓ (8.1 US qt, 6.8 Imp qt) Automatic transmission: 7.6 ℓ (8.0 US qt, 6.7 Imp qt) Check specific gravity for freezing point	10-5
Timing belt														R* ⁴			6-31, 34
Water pump														I			10-8
Three way catalytic converter heat shield									I							Check condition and tightness.	11-139
Exhaust pipe (before catalytic converter)					I* ¹				I* ¹					I* ¹		Check condition and tightness.	9-4
Exhaust pipe and muffler (after catalytic converter)			I		I		I		I		I		I		I	Check condition and tightness.	9-4
<input type="checkbox"/> Manual transmission oil					<input checked="" type="checkbox"/> R				<input checked="" type="checkbox"/> R					<input checked="" type="checkbox"/> R		2.3 ℓ (2.4 US qt, 2.0 Imp qt) for change	13-4
<input type="checkbox"/> Automatic transmission fluid					<input checked="" type="checkbox"/> R				<input checked="" type="checkbox"/> R					<input checked="" type="checkbox"/> R		3.3 ℓ (3.5 US qt, 2.9 Imp qt) for change HONDA Premium Formula ATF or DEXRON® II ATF	14-85
<input type="checkbox"/> Front differential oil					<input checked="" type="checkbox"/> R				<input checked="" type="checkbox"/> R					<input checked="" type="checkbox"/> R		1.05 ℓ (1.11 US qt, 0.92 Imp qt) for change Hypoid gear oil classified GL4 or GL5	15-4

*: Check oil and coolant level at each fuel stop.

☐: Under severe driving conditions, service these items more often.

*¹ For cars sold in California, this service is recommended only; other areas, it is required.

*² Replace every 6 years or 60,000 miles (96,000 km), whichever comes first.

*³ Thereafter, replace every 2 years or 30,000 miles (48,000 km), whichever comes first.

*⁴ This service is recommended only.

*⁵ L or LS

*⁶ GS

*⁷ Do not adjust the gap, replace the spark plug if it is out of service limit.

R—Replace I—Inspect After inspection, clean, adjust, repair or replace if necessary.

Service at the interval listed x 1,000 miles (or km) or after that number of months, whichever comes first.																NOTE	SEC and PAGE
Maintenance item	x 1,000 miles	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105		
	x 1,000 km	12	24	36	48	60	72	84	96	108	120	132	144	156	168		
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84		
Brakes																	
Front brake pads	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Min. thickness: 1.6 mm (0.06 in)	19-7
<input type="checkbox"/> Front brake discs and calipers		I		I		I		I		I		I		I		Min. thickness: 21.0 mm (0.83 in)	19-11
<input type="checkbox"/> Rear brake discs, calipers and pads		I		I		I		I		I		I		I		Min. thickness: Discs 7.5 mm (0.30 in) : Pads 1.6 mm (0.06 in)	19-28 19-18
Parking brake drums and linings				I				I					I			Max. I.D. : Drums 171.0 mm (6.73 in) Min. thickness: Pads 1.0 mm (0.04 in)	19-22
Brake hoses and lines		I		I		I		I		I			I		I	Check for leaks, damage, interference or twisting.	19-29
Parking brake		I		I				I					I			Fully engaged: 6 to 8 clicks.	19-4
Brake fluid (Including Anti-lock brake system)					R				R					R		Use only DOT3 or DOT4 fluid. Check that brake fluid level is between the upper and lower marks on the reservoir.	19-11
Anti-lock brake system operation					I				I					I		Function test Wheel sensor signal confirmation Anti-lock brake system indicator light.	19-31
Anti-lock brake system high pressure hose									R							Bleed high pressure fluid.	19-77
Steering, Suspension, Miscellaneous																	
Front wheel alignment		I		I		I		I		I			I		I		18-4
Steering operation, tie rod ends, steering gearbox and boots		I		I				I					I			Check rack grease and steering linkage. Check the boot for damage or leaking grease.	17-3
<input type="checkbox"/> Power steering system		I		I		I		I		I			I		I		17-20
Power steering pump belt				I				I					I			11.5—13.5 mm (0.45—0.53 in) with 100 N (10 kg, 22 lbs) tension	17-17
Suspension mounting bolts		I		I		I		I		I			I		I	Check tightness of bolts.	18-8, 20
Air conditioning filter		R		R		R		R		R			R		R		21-60
Supplemental restraint system	Inspect system 10 years after production																—

☐: Under severe driving conditions, service these items more often.

Severe Driving Conditions

Items marked **R** or **I** in the chart indicate you will need some services more frequently in certain severe driving conditions.

The conditions are:

- A: Driving less than 5 miles (8 km) per trip, or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- B: Driving on rough or muddy roads, or de-iced roads.
- C: Driving in extremely dusty conditions.
- D: Extensive idling or driving long periods at slow speeds, such as a delivery vehicle.
- E: Towing a trailer.

Services for Severe Driving Conditions

- Clean the air cleaner element every 15,000 miles (24,000 km) or 12 months and replace every 30,000 miles (48,000 km) or 24 months under condition B or C.
- Replace engine oil and oil filter every 3,750 miles (6,000 km) or 3 months under condition A, B, C, D or E.
- Replace transmission oil every 15,000 miles (24,000 km) or 12 months under condition D or E.
- Replace front differential oil every 15,000 miles (24,000 km) or 12 months under condition D or E.
- Inspect front brake discs and calipers, and rear brake discs, calipers and pads every 7,500 miles (12,000 km) or 6 months under condition B, C, D or E.
- Inspect the power steering system every 7,500 miles (12,000 km) or 6 months under condition A, B, or C.

