




# Illustrated Index

**CAUTION:** To avoid damaging the cylinder head, wait until the engine coolant temperature drops below 100°F (38°C) before removing it.

**NOTE:**

- Use new O-rings and gaskets when reassembling.
- Replace rubber seals if damaged or deteriorated.

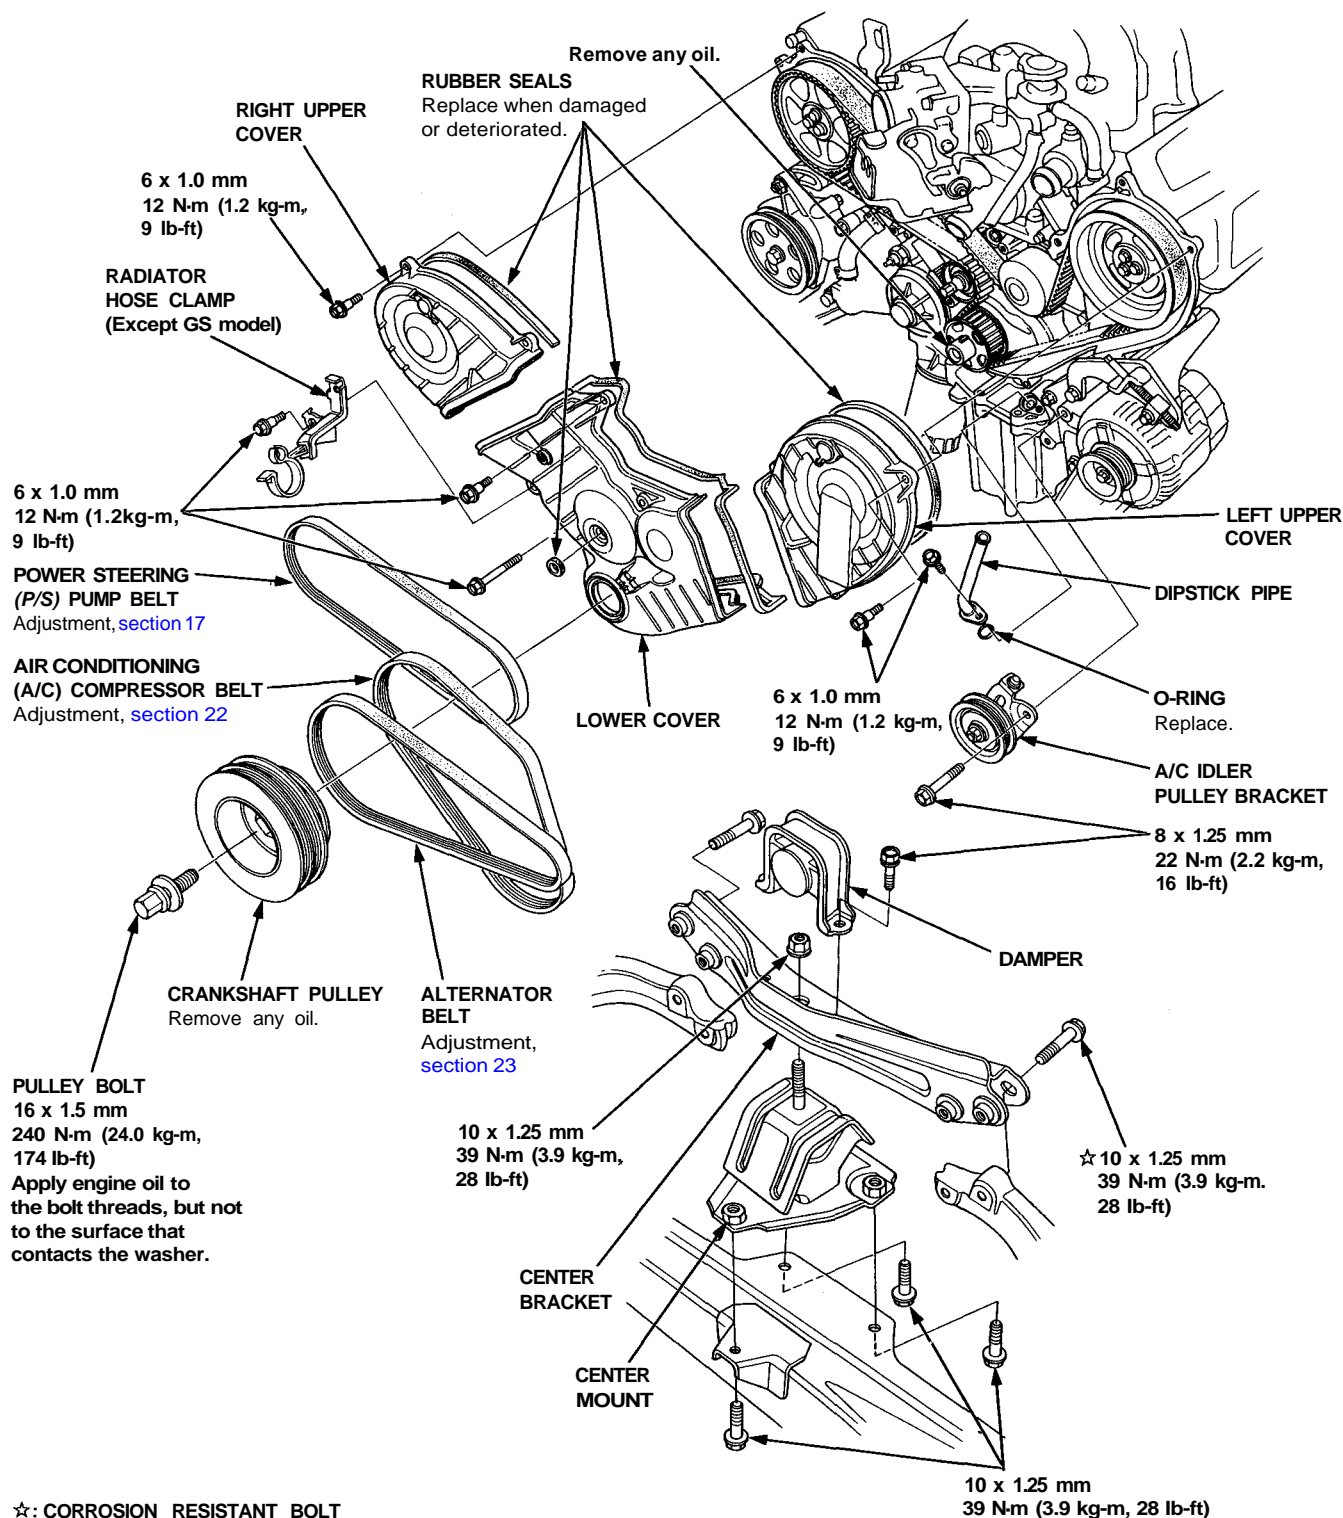

☆: CORROSION RESISTANT BOLT


(cont'd)

# Illustrated Index

(cont'd)

## NOTE:

- Use new O-rings and gaskets when reassembling.
- Replace rubber seals if damaged or deteriorated.

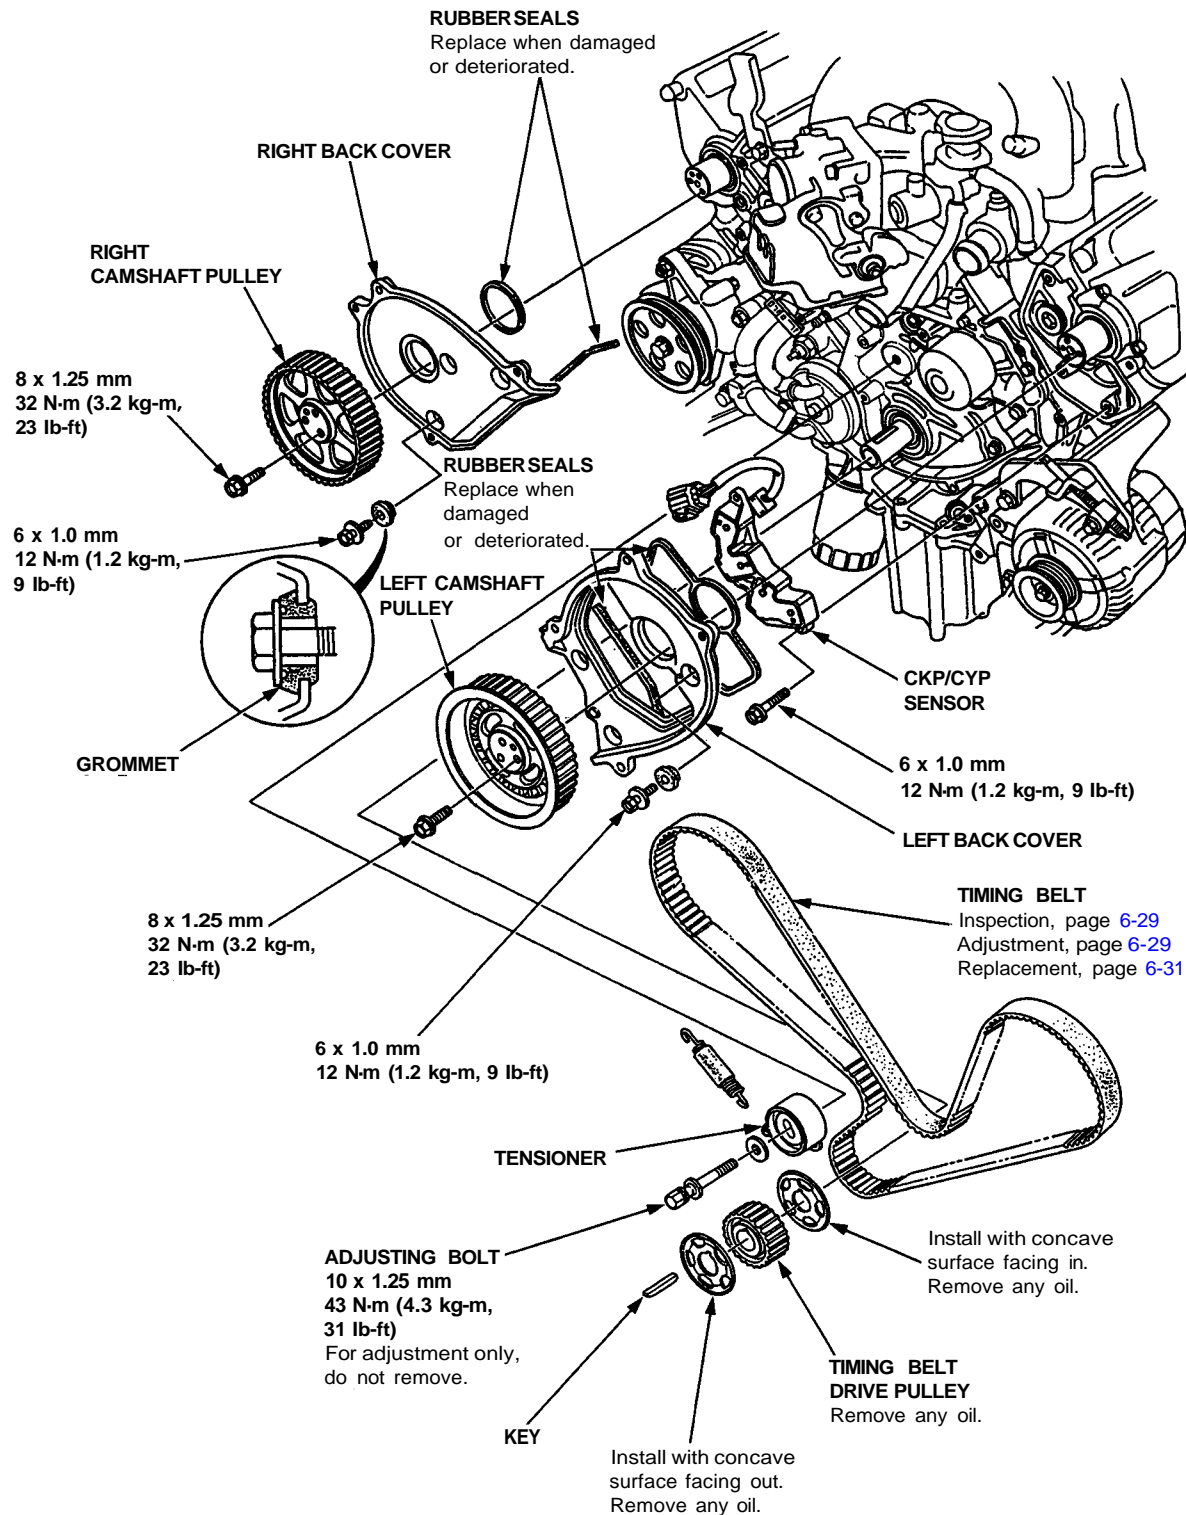




**CAUTION:** To avoid damaging the cylinder head, wait until the engine coolant temperature drops below 100°F (38°C) before removing it.

**NOTE:**

- Use new O-rings and gaskets when reassembling.
- Use liquid gasket, Part No. 08718 - 0001.

 Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

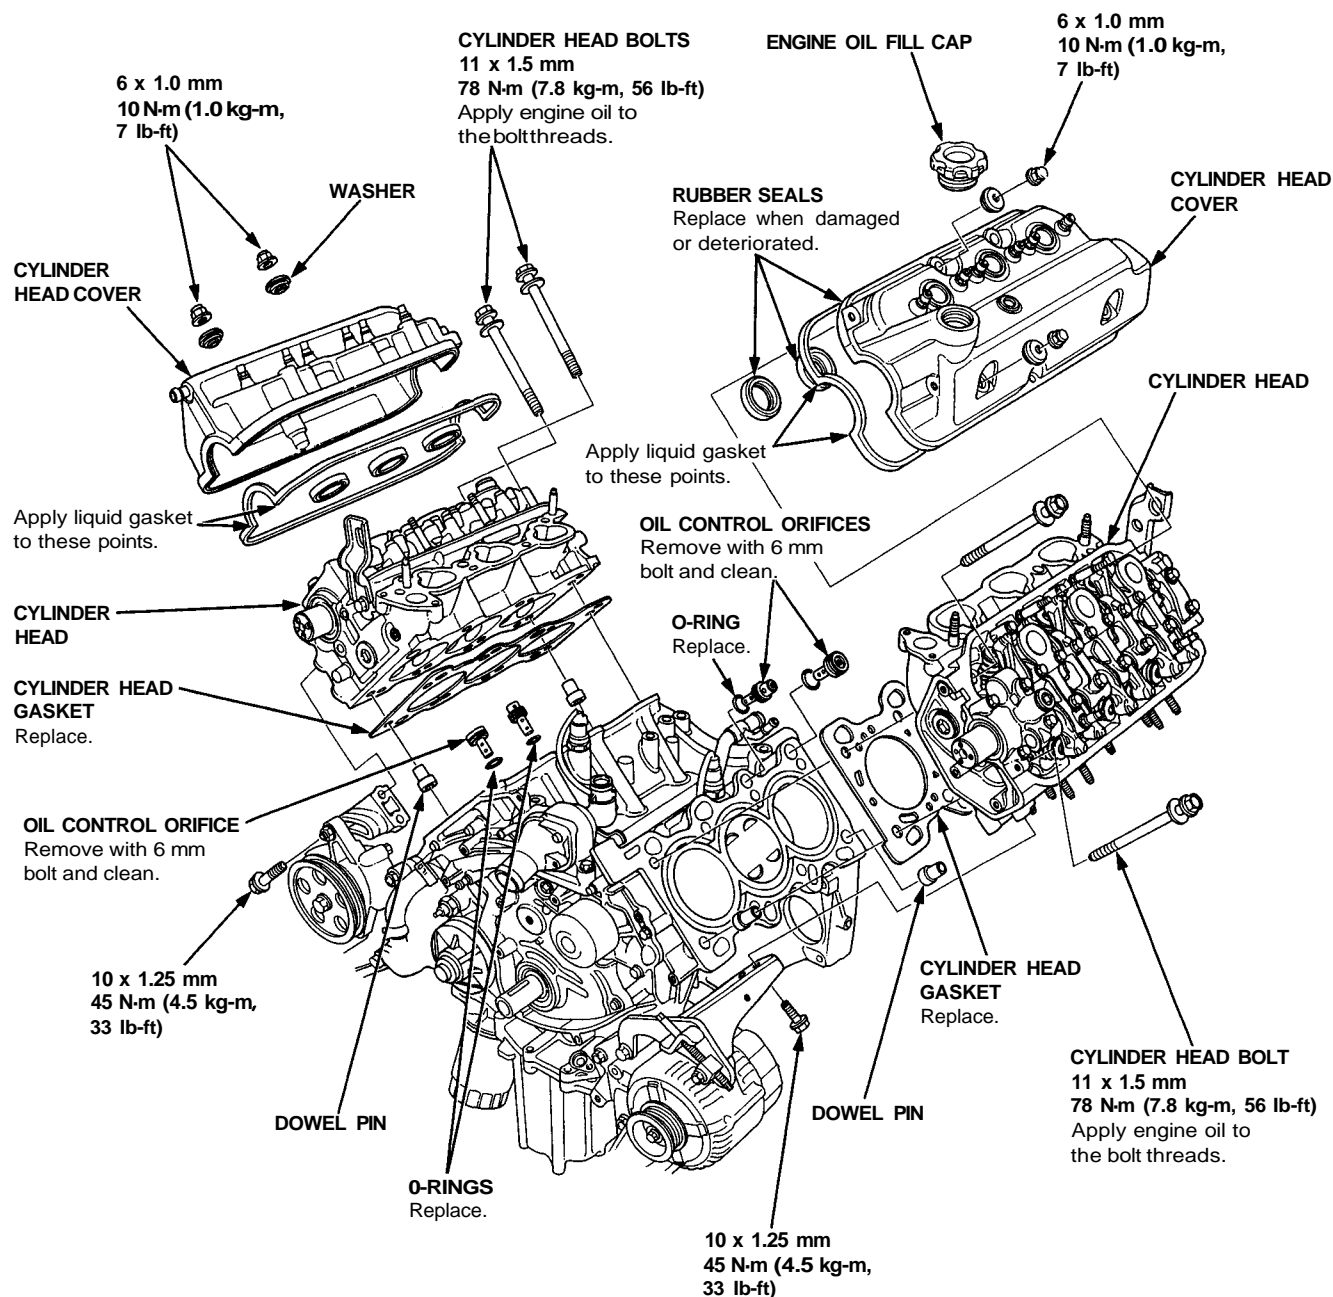

(cont'd)

# Illustrated Index

(cont'd)

## NOTE:

- Use new O-rings and gaskets when reassembling.
- Use liquid gasket, Part No. 08718 — 0001.

 Prior to reassembling, clean all the parts in solvent, dry them, and apply lubricant to any contact parts.

