




Rocker Arms and Shafts


Overhaul

NOTE:

- Refer to page 6-14 for rocker arm assembly removal.
- Identify parts as they are removed to ensure reinstallation in original locations.
- Inspect rocker shafts and rocker arms (see page 6-16).
- Rocker arms must be installed in the same position if reused.
- When removing or installing rocker arm assembly, do not remove the camshaft holder bolts. The bolts will keep the holders, springs and rocker arms on the shaft.

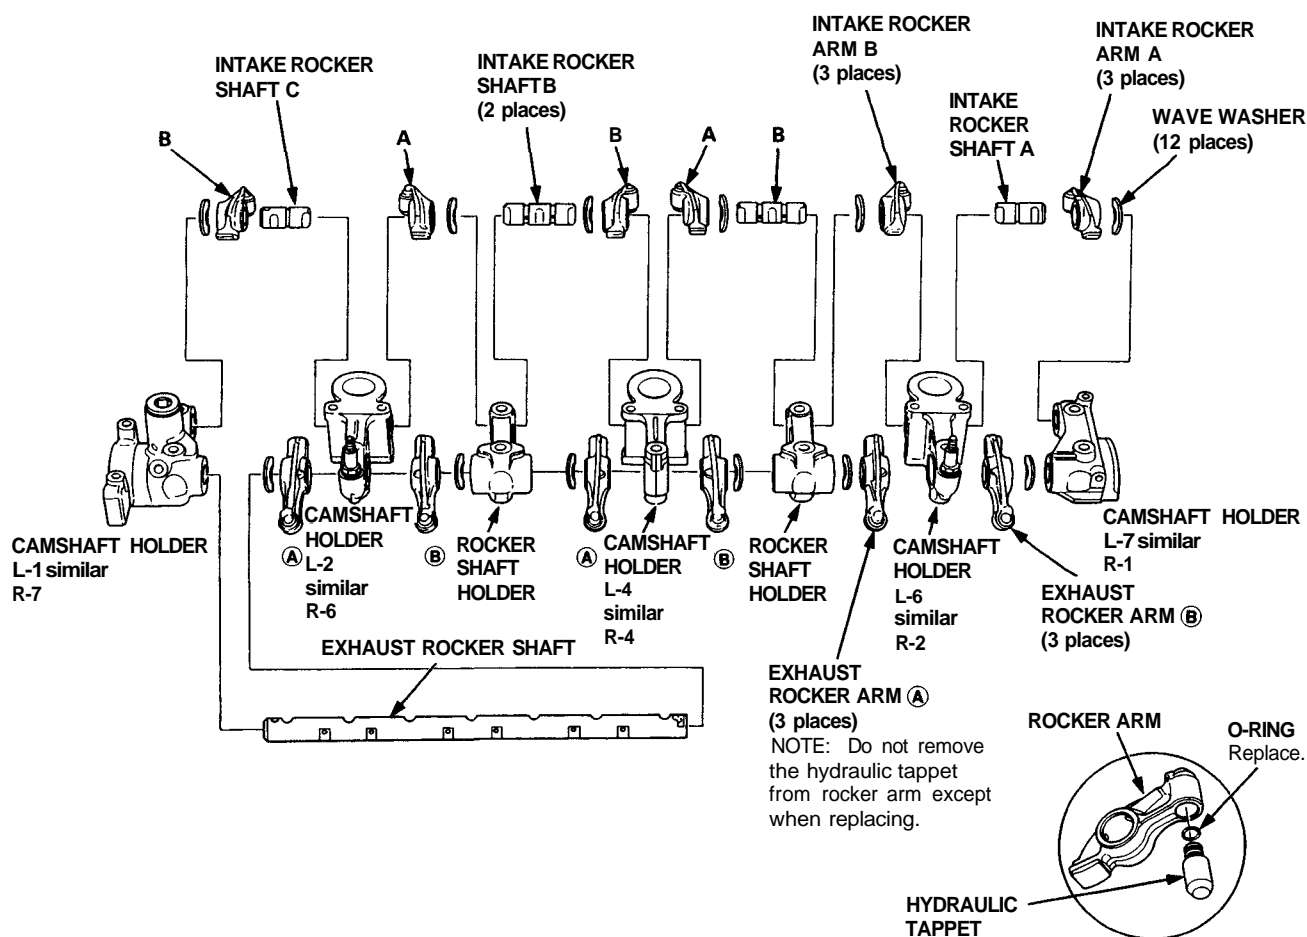


INTAKE ROCKER ARM A

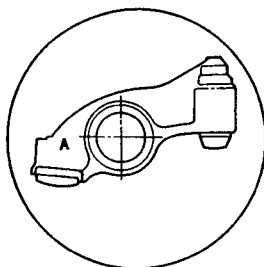


Letter "A" is stamped on rocker arm.

INTAKE ROCKER ARM B

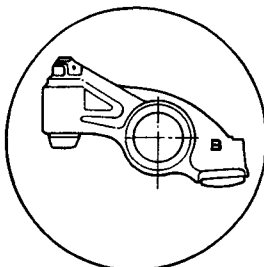


Letter "B" is stamped on rocker arm.

EXHAUST ROCKER ARM A

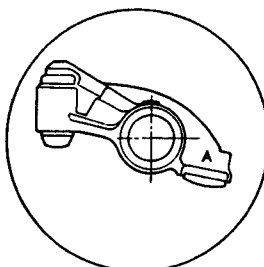

Letter "A" is stamped on rocker arm.

EXHAUST ROCKER ARM B

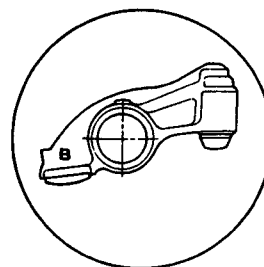

Letter "B" is stamped on rocker arm.

L: Left
R: Right