



Illustrated Index

NOTE:

- Use new O-rings when reassembling.
- Apply oil to O-rings before installation.
- Install the rotors in the oil pump housing with the marks facing the pump cover.

