



# Radiator

## Replacement

1. Drain the engine coolant.
2. Remove the upper and lower radiator hoses, and ATF cooler hoses.
3. Disconnect the fan motor connectors and the radiator fan control sensor connector.
4. Remove the upper brackets and cushions, then pull up the radiator.

5. Remove the radiator and condenser fan shroud assemblies and other parts from radiator.

Install the radiator in the reverse order of removal:

### NOTE:

- Set the upper and lower cushions securely.
- Fill the radiator and bleed the air.

