

Idle Control System

Starting Air Valve

Description

When cranking the engine, the starting air valve supplies additional air to the intake manifold to ease engine starting.

