

Illustrated Index

NOTE:

- Whenever the transmission is removed, clean and grease the release bearing sliding surface.
- If the parts marked * are removed, the clutch hydraulic system must be bled (see page 12-7).
- Inspect the hoses for damage, leaks, interference, and twisting.
- 5-speed is shown.

