


Pressure Plate, Clutch Disc

Installation



NOTE: Use only Super High Temp Urea Grease (P/N 08798—9002).

1. Install the ring gear holder.
2. Apply grease to the splines of the clutch disc, and install the clutch disc using the special tools as shown.

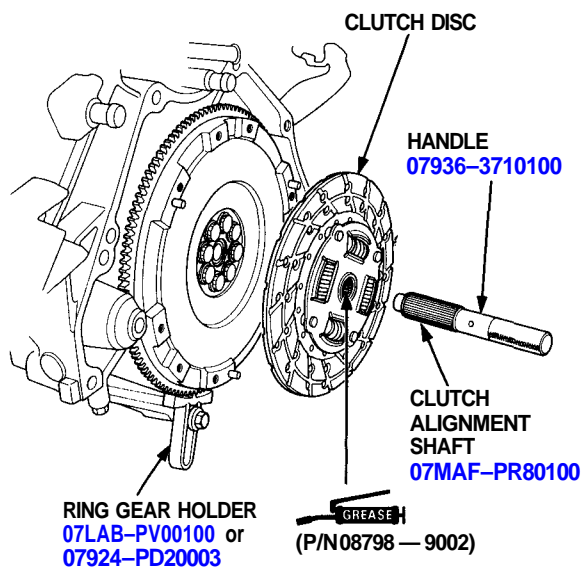


3. Install the release bearing on the pressure plate.
4. Install the pressure plate.

NOTE: After installing the pressure plate, make sure the release bearing does not come off.

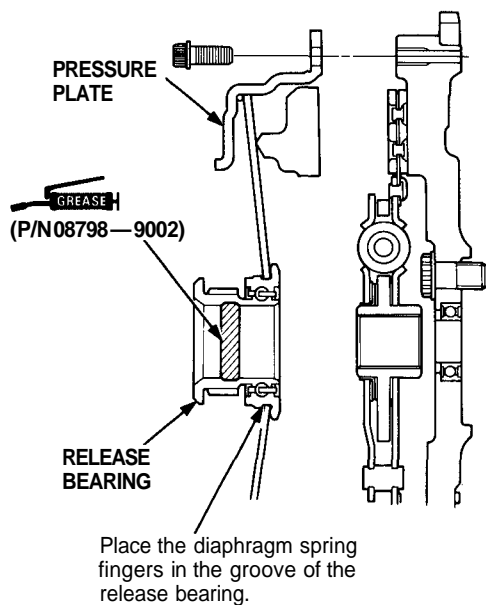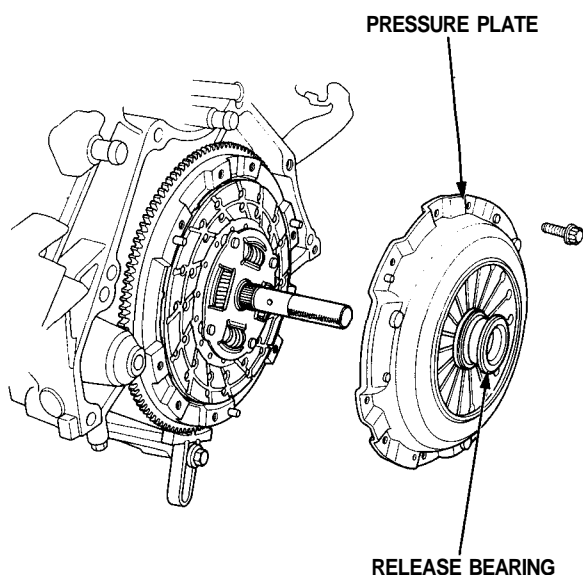

5. Torque the mounting bolts in a crisscross pattern as shown. Tighten the bolts in several steps to prevent warping the diaphragm spring.

NOTE: After installing the pressure plate, make sure the release bearing does not come off.

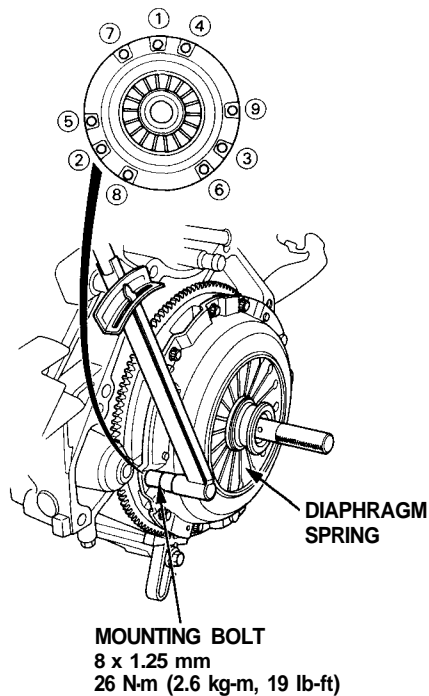

6. Remove the special tools.
7. Check the diaphragm spring fingers for height (see page 12-8).