



Back-up Light Switch, Neutral Position Switch

Replacement

NOTE: To test the back-up light switch and neutral position switch, see [section 23](#).


1. Remove the release fork cover and the slave cylinder.

NOTE:


- Do not disconnect the clutch pipe from the slave cylinder.
- Take care not to bend the clutch pipe.

6 x 1.0 mm
12 N·m (1.2 kg-m, 9 lb-ft)

8 x 1.25 mm
22 N·m (2.2 kg-m,
16 lb-ft)

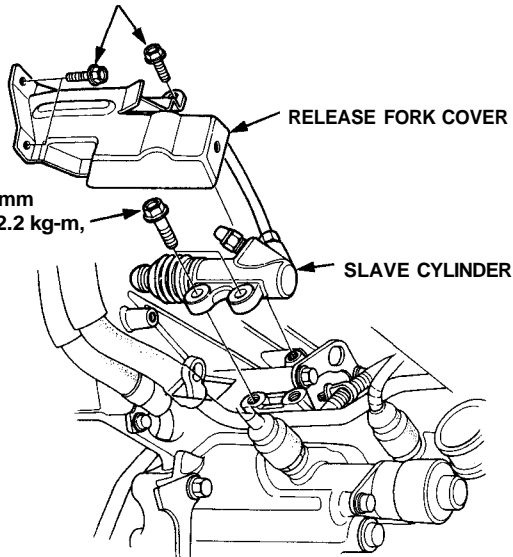


2. Disconnect the connector, then remove the switch connector from the connector clamp.
3. Remove the neutral position switch.

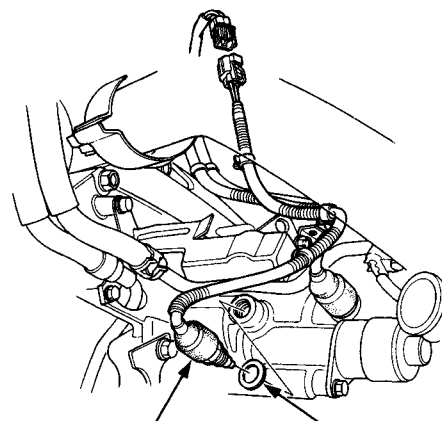


NEUTRAL POSITION SWITCH
25 N·m (2.5 kg-m, 18 lb-ft)

WASHER
Replace.

4. Loosen the back-up light switch using a crowfoot wrench as shown (6-Speed).

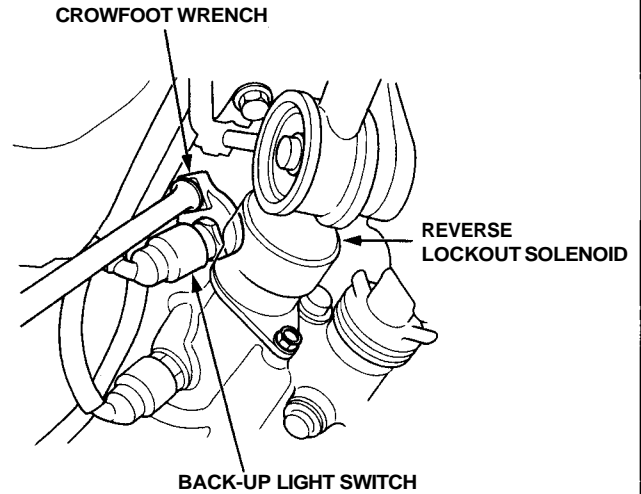

5. Remove the back-up light switch.

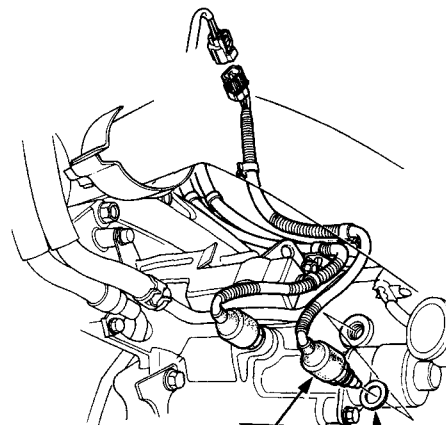

BACK-UP LIGHT SWITCH
28 N·m (2.8 kg-m, 20 lb-ft)
(Tighten by crowfoot wrench.)
25 N·m (2.5 kg-m, 18 lb-ft)
(Tighten by normal wrench.)

WASHER
Replace.

6. Install the new washer and switch in the reverse order of removal.