
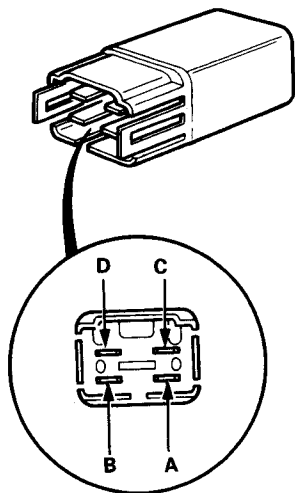


Reverse Lockout Relay (6-Speed)

Test

1. Remove the reverse lockout relay from the underhood relay box C.
2. There should be continuity between the C and A terminals.
3. There should be continuity between the D and B terminals when power and ground are connected to the C and A terminals. There should be no continuity when power is disconnected.

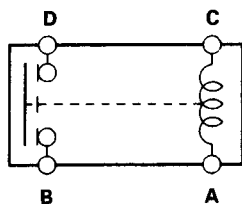

Reverse Lockout Solenoid (6-Speed)

Test

1. Disconnect the 3-P connector of the reverse lockout solenoid sub-harness.
2. Measure the resistance between terminals A and B in the reverse lockout solenoid sub-harness.

STANDARD: 9.0—13.6 Ω

