

Transmission Cover

Removal

1. Remove the transmission cover following the numbered sequence.

NOTE:

- Loosen the bolts ⑱ in a crisscross pattern in several steps.
- Replace all sealing washers.
- 6-Speed type is shown.

