



5th/6th Gear

Removal

1. Remove 5th/6th gear following the numbered sequence.

NOTE:

- Countershaft locknut has left-hand threads.
- 6-Speed type is shown.

