


Mainshaft, Countershaft, Reverse Gear Shaft

Disassembly

1. Disassemble the mainshaft, countershaft and the reverse gear shaft assemblies following the numbered sequence.


NOTE:

- Always replace the spring pins when removed.
- ①⑨ ②⑩ is 6-Speed type only.
- 6-Speed type is shown.

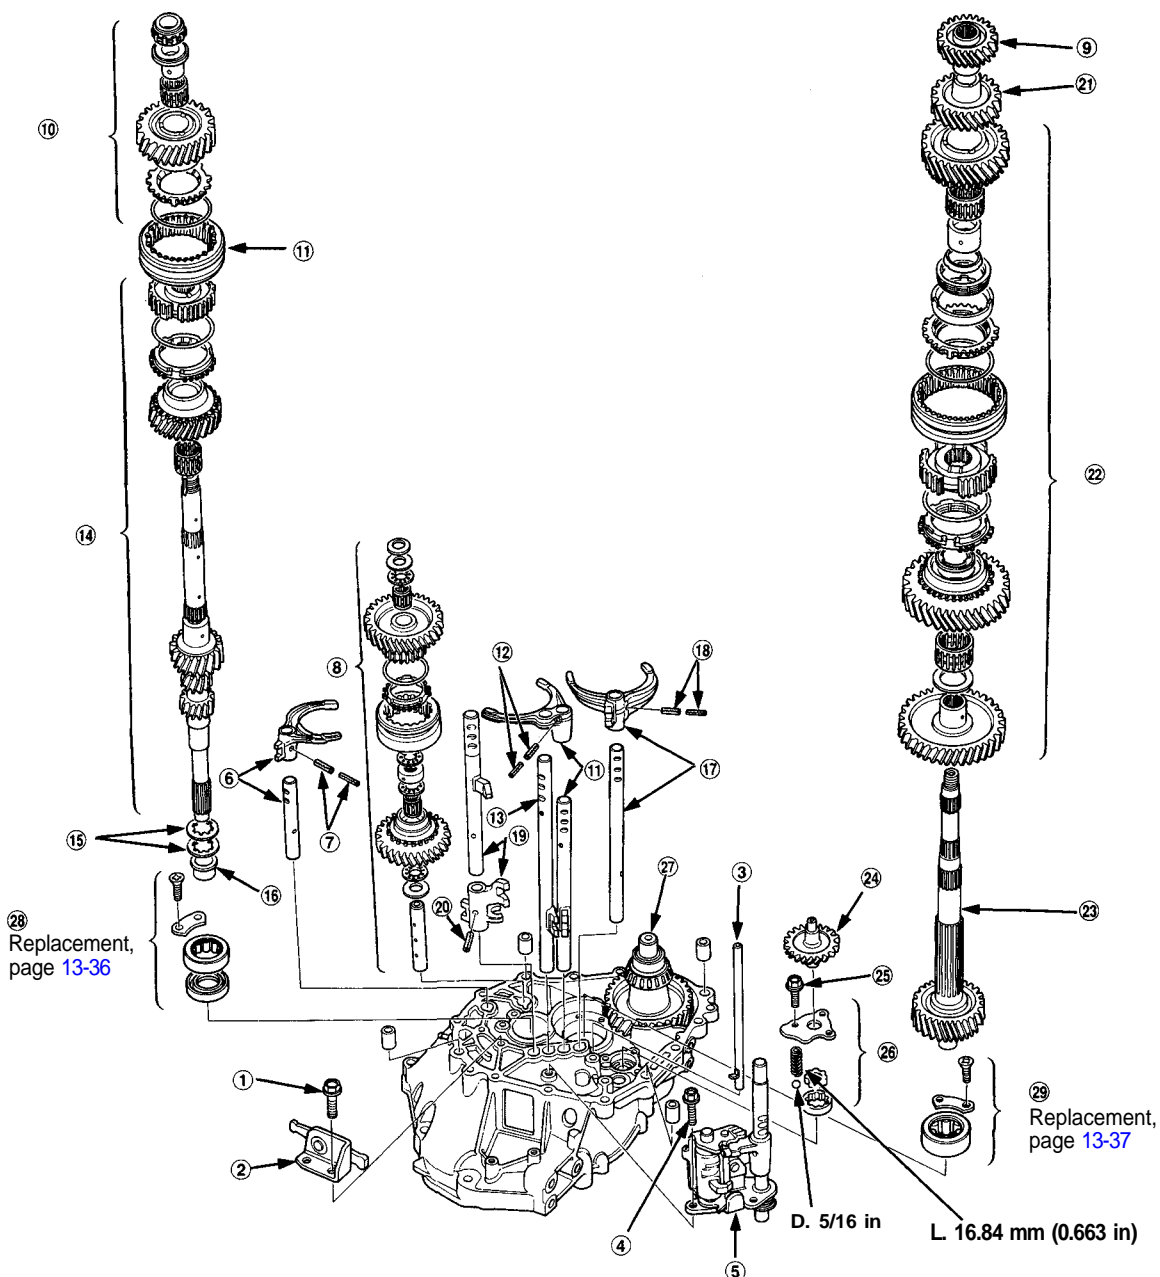



–1. Remove the spring pins from the shift fork shaft.

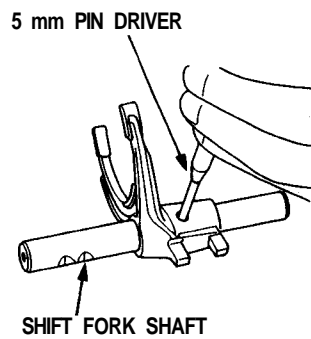

–2. Remove 3rd gear using a press as shown.

