


Countershaft Bearing (Clutch Housing)




Replacement

1. Remove the needle set plate.

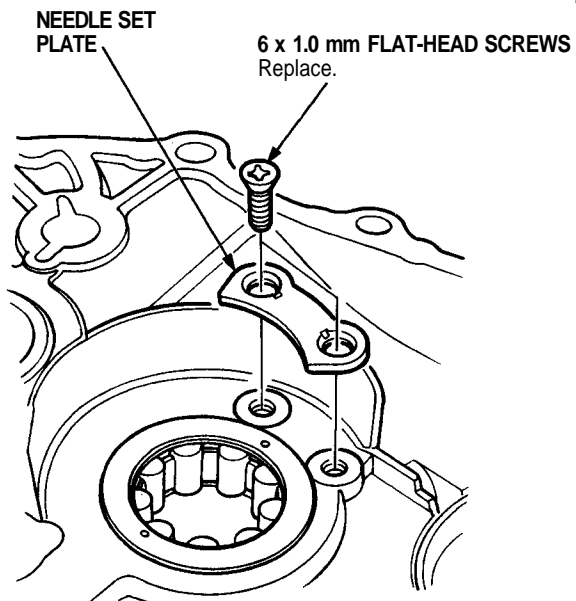


2. Remove the needle bearing using the special tool as shown.

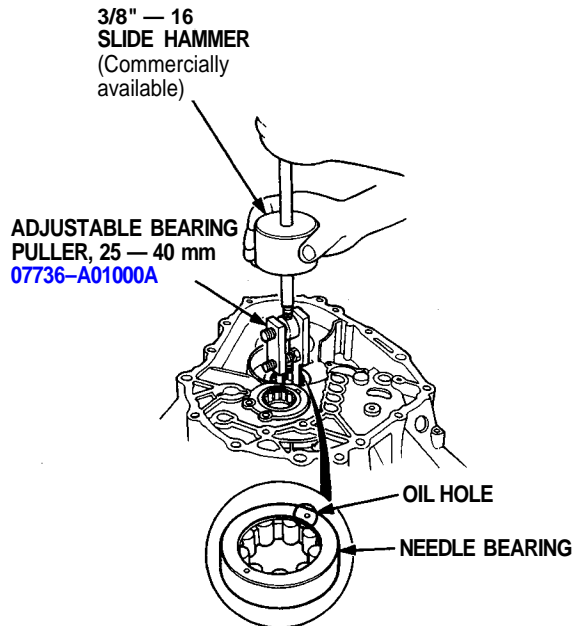

3. Position the new needle bearing in the bore of the clutch housing.


NOTE: Position the needle bearing with the oil hole facing up.

4. Drive the needle bearing in using the special tools as shown.

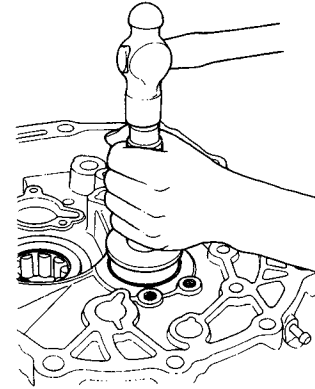

DRIVER
07749-0010000

ATTACHMENT, 62 x 68 mm
07746-0010500

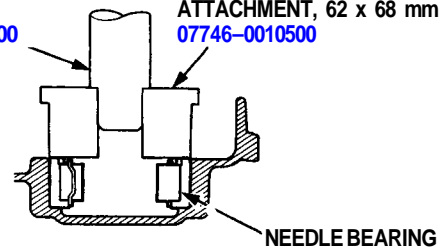

5. Install the needle set plate, and stake the flat-head screw heads in the groove in the needle set plate.

6 x 1.0 mm FLAT-HEAD SCREW
Replace.
10 N-m (1.0 kg-m, 7 lb-ft)

