


Oil Seal

Removal

1. Remove the oil seal from the transmission housing.

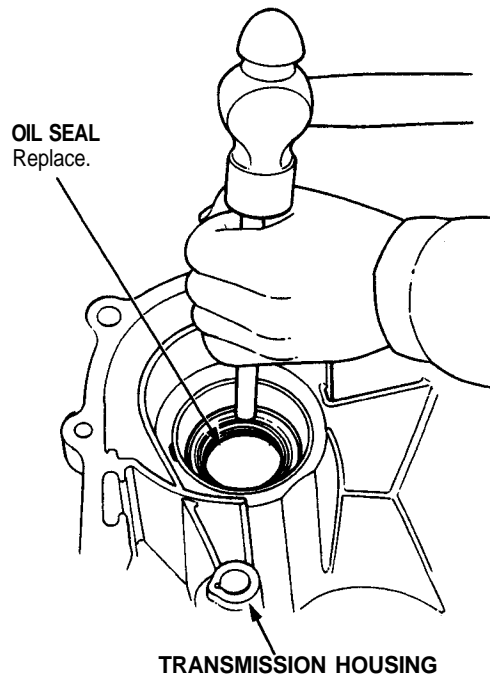

2. Remove the oil seal from the clutch housing.

