


# Oil Seal

## Installation

### Transmission Housing Side:

1. Install the oil seal using the special tools as shown.

NOTE: After installing, measure the clearance between the transmission housing end and the oil seal.

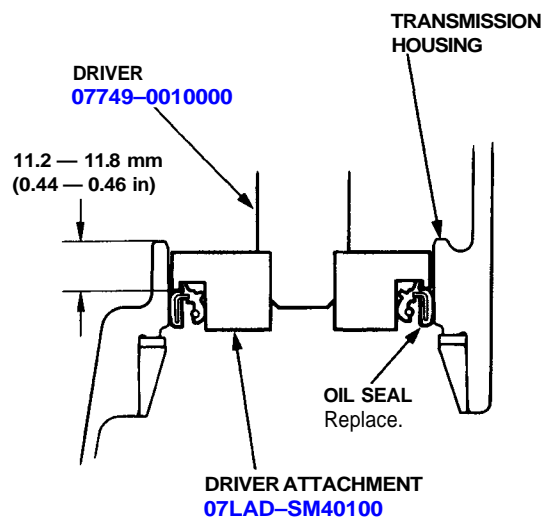

### Clutch Housing Side:

1. Install the oil seal using the special tools as shown.

NOTE: Drive the oil seal in until it is flush with clutch housing end.

