

Electrical Troubleshooting


Troubleshooting Flowchart (cont'd)

Self-diagnosis **D4** indicator light blinks eleven times.

Possible Cause
• Trouble in PCM

Disconnect No. 15: ACG(s) fuse (7.5 A) in the under-dash fuse box for 10 seconds to reset the PCM.

Drive the car for several miles so that the transmission upshifts and down-shifts several times.

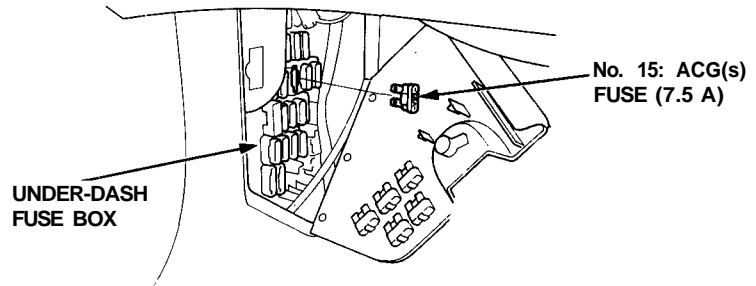

Does self-diagnosis **D4** indicator light blink eleven times?

NO

Intermittent failure, system is OK at this time.

YES

Replace the PCM.