 



Mainshaft/Countershaft Speed Sensors



Replacement

1. Remove the 6 mm bolt from the transmission housing and remove the mainshaft and countershaft speed sensors.
2. Replace the O-rings with new ones before reassembling the mainshaft and countershaft speed sensors.

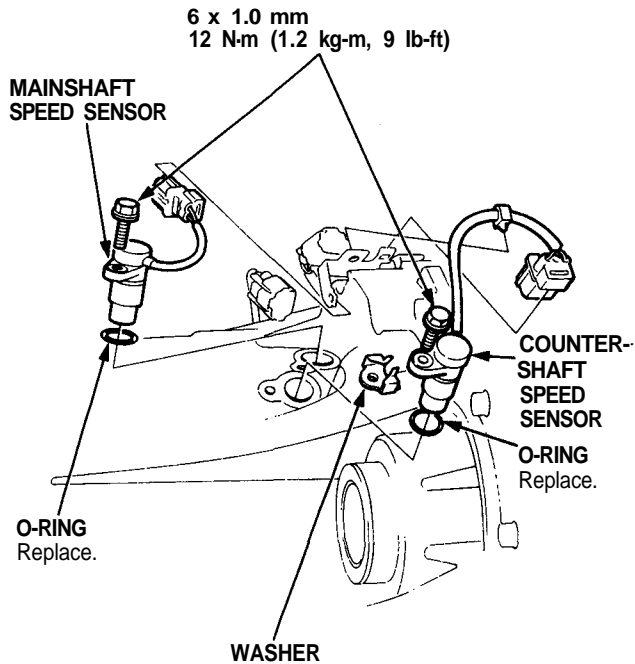

NOTE: Install the washer to the countershaft speed sensor before reassembling the countershaft speed sensor.