





# Valve

## Assembly

NOTE: Coat all parts with ATF before assembly.

- Install the valve, valve spring and cap in the valve body and secure with the roller.

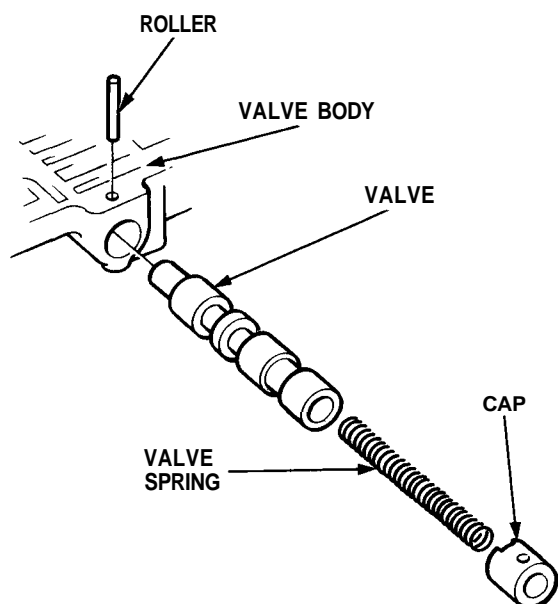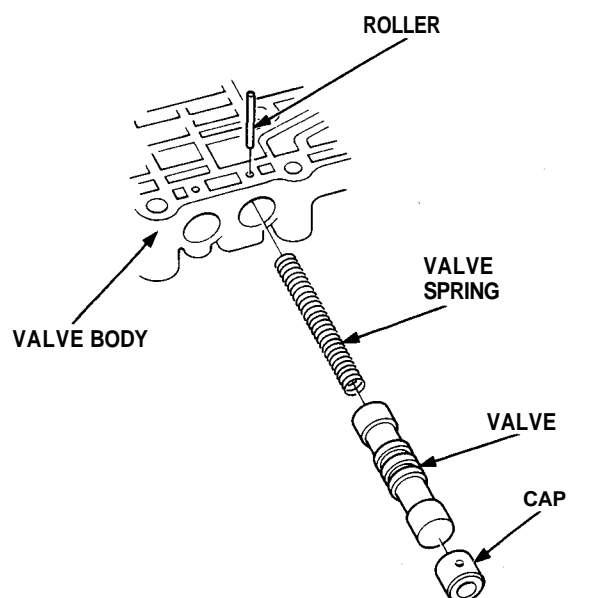

- Set the valve spring in the valve and install it in the valve body. Push the valve spring in with a screwdriver then install spring seat.

