



Disassembly

1. Remove the snap ring.
2. Remove the piston sleeve and spring.
3. Remove the one-way ball spring.

NOTE: Do not remove the steel ball.

4. Wrap a shop towel around the accumulator piston and apply air pressure to the oil passage to remove the piston.

WARNING

- Do not place your fingers in front of piston.
- Do not use high air pressure; use an OSHA approved 30 PSI nozzle.

