

# Rear Cover

## Disassembly/Inspection/Reassembly

### NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- Replace the O-rings.
- Coat all parts with ATF before reassembly.

