





## 2nd Gear One-way Clutch/Parking Gear

### Disassembly/Inspection


1. Separate countershaft 2nd gear from the parking gear by turning the parking gear in the direction shown.

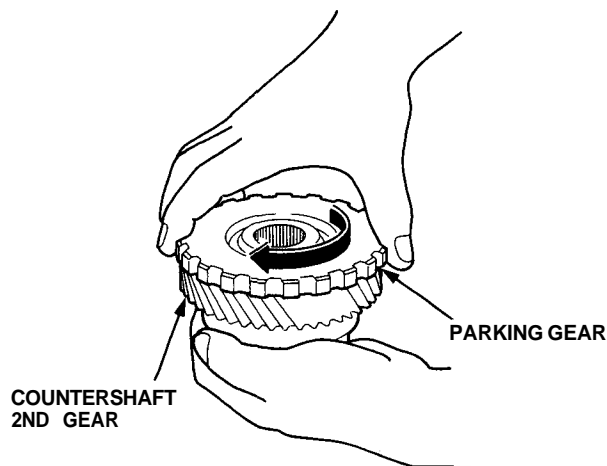

2. Remove the one-way clutch by prying it up with the end of a screwdriver.

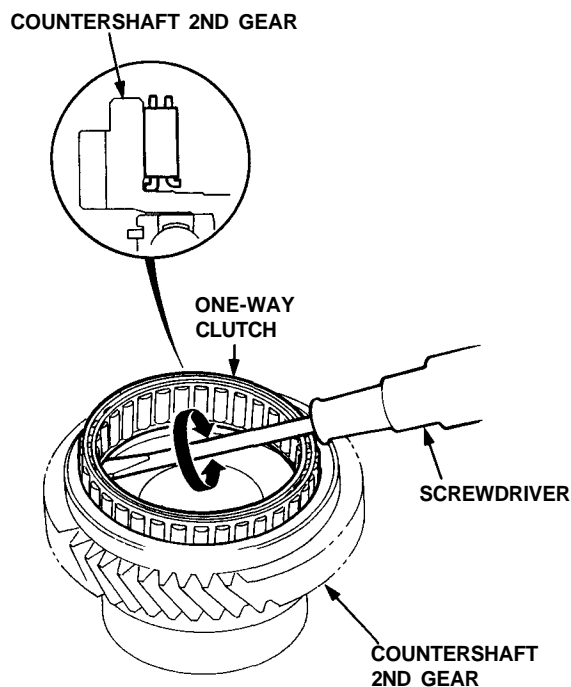

3. Inspect the following parts.

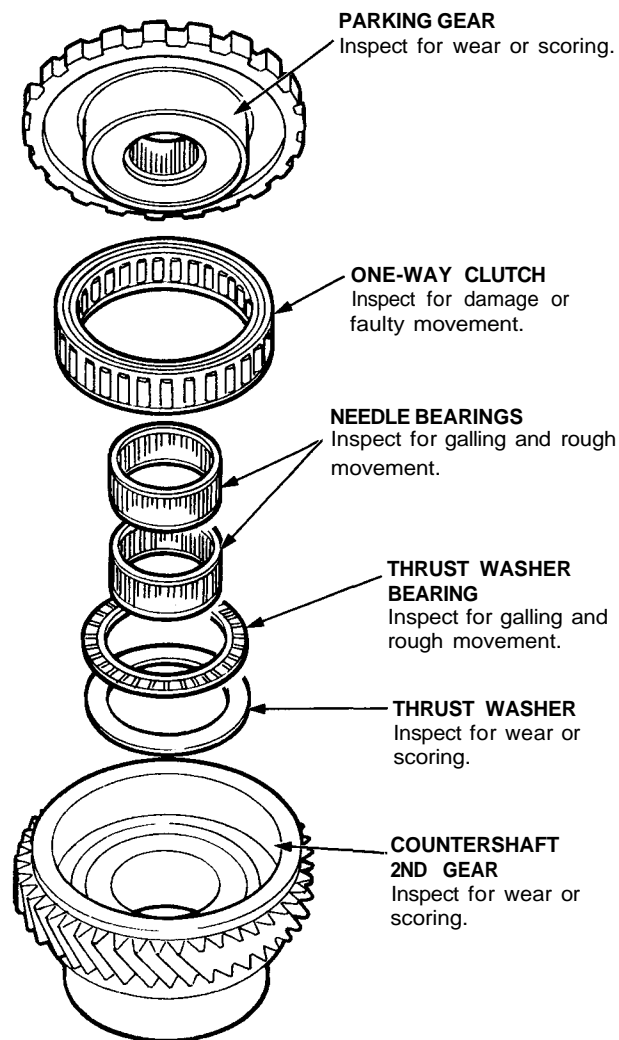

4. Hold countershaft 2nd gear and turn the parking gear in the direction shown to be sure it turns freely.

