



# 1st Gear One-way Clutch/Countershaft 1st, 2nd Gear

## Disassembly/Inspection/Reassembly

1. Remove the set plate from countershaft 1st gear.
2. Remove the one-way clutch by prying it up with the end of a screwdriver.

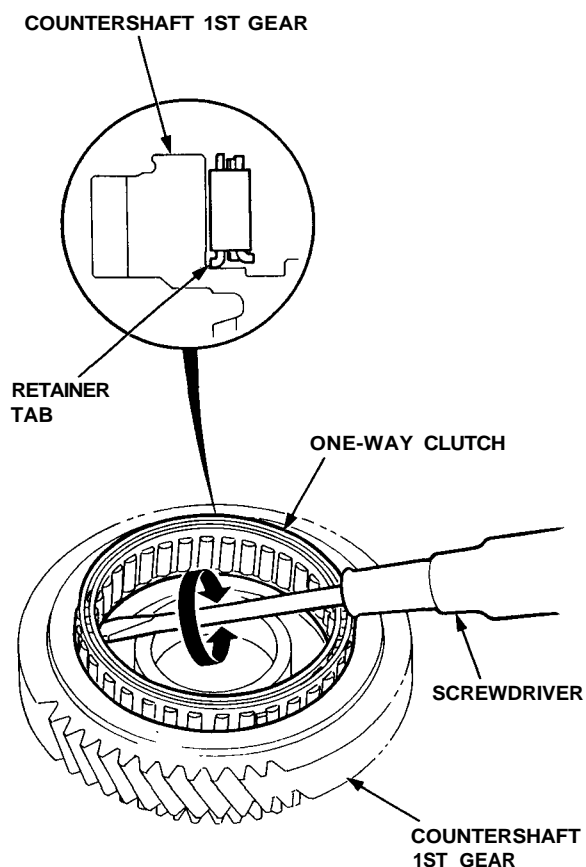

3. Inspect the following parts.

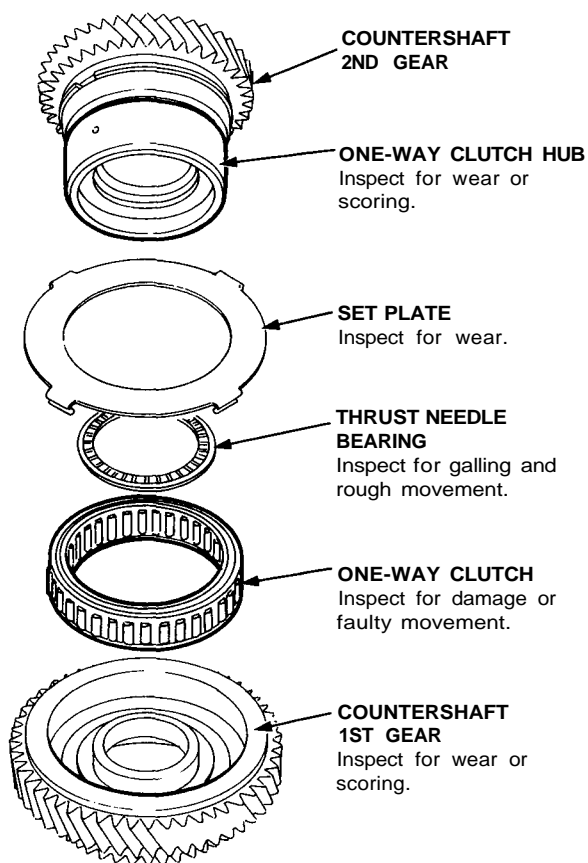

4. Assemble the one-way clutch, thrust needle bearing and set plate.
5. Hold countershaft 1st gear and turn the countershaft 2nd gear assembly in the direction shown to be sure it turns freely.

