


# Countershaft 2nd Gear/One-way Clutch Hub/Ball Bearing



## Disassembly

1. Remove the one-way clutch hub and ball bearing from countershaft 2nd gear using the special tool and a press.

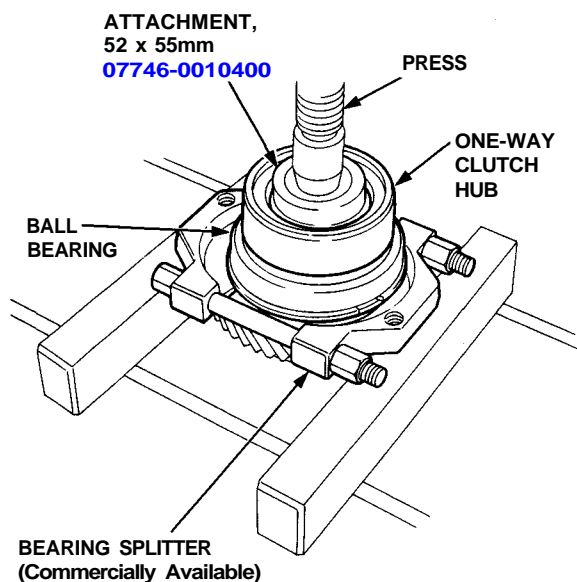

## Reassembly

1. Install the ball bearing and one-way clutch hub to countershaft 2nd gear using the special tool and a press.

