



# Oil Seal


## Installation

- If the bearing preload is out of tolerance, select and install a new thrust washer, 75 mm then recheck.

### THRUST WASHER, 75 mm

No.	Part Number	Thickness mm (in)
A	23941-PY5-000	1.56 (0.061)
B	23942-PY5-000	1.59 (0.063)
C	23943-PY5-000	1.62 (0.064)
D	23944-PY5-000	1.65 (0.065)
E	23945-PY5-000	1.68 (0.066)
F	23946-PY5-000	1.71 (0.067)
G	23947-PY5-000	1.74 (0.069)
H	23948-PY 5-000	1.77 (0.070)
I	23949-PY5-000	1.80 (0.071)
J	23950-PY5-000	1.83 (0.072)
K	23951-PY5-000	1.86 (0.073)
L	23952-PY5-000	1.89 (0.074)
M	23953-PY5-000	1.92 (0.076)
N	23954-PY5-000	1.95 (0.077)
O	23955-PY5-000	1.98 (0.078)
P	23956-PY5-000	2.01 (0.079)
Q	23957-PY5-000	2.04 (0.080)
R	23958-PY5-000	2.07 (0.081)
S	23959-PY5-000	2.10 (0.083)
T	23960-PY 5-000	2.13 (0.084)
U	23961-PY5-000	2.16 (0.085)
V	23962-PY5-000	2.19 (0.086)
W	23963-PY5-000	2.22 (0.087)
X	23964-PY5-000	2.25 (0.089)
Y	23965-PY5-000	2.28 (0.090)
Z	23966-PY5-000	2.31 (0.091)
AA	23967-PY5-000	2.34 (0.092)
AB	23968-PY5-000	2.37 (0.093)
AC	23969-PY5-000	2.40 (0.094)
AD	23970-PY5-000	2.43 (0.096)

- Install the oil seal in the transmission housing, using the special tools.

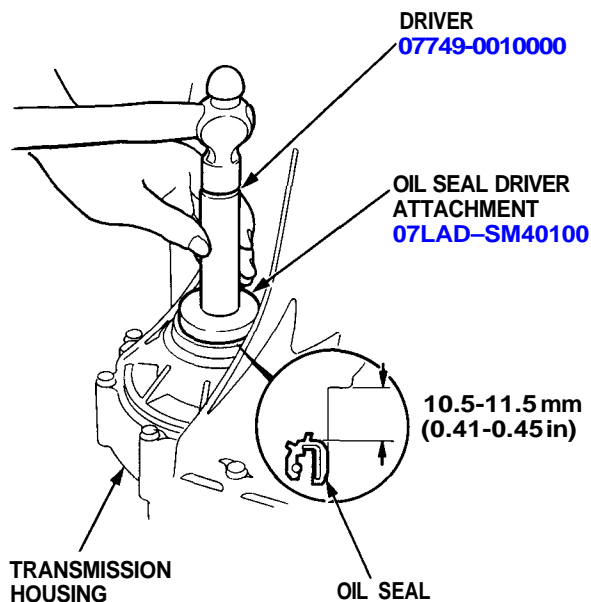

- Install the oil seal in the torque converter housing, using the special tools as shown.
- Install the snap ring in the torque converter housing.

