



# Parking Brake Mechanism

## Disassembly/Inspection/Reassembly

1. Remove the parking brake pawl shaft sleeve, parking brake pawl and parking brake pawl spring.
2. Remove the bolt securing the detent lever to the control shaft, then remove the control shaft.
3. Remove the detent lever and parking brake rod assembly from the transmission housing.
4. Assemble the parking brake mechanism in the reverse order of disassembly.

