





# Intermediate Shaft

## Removal/Installation


1. Drain the oil from the differential (see page 15-4).
2. Remove the left driveshaft assembly (see page 16-3).
3. Remove the three bolts.

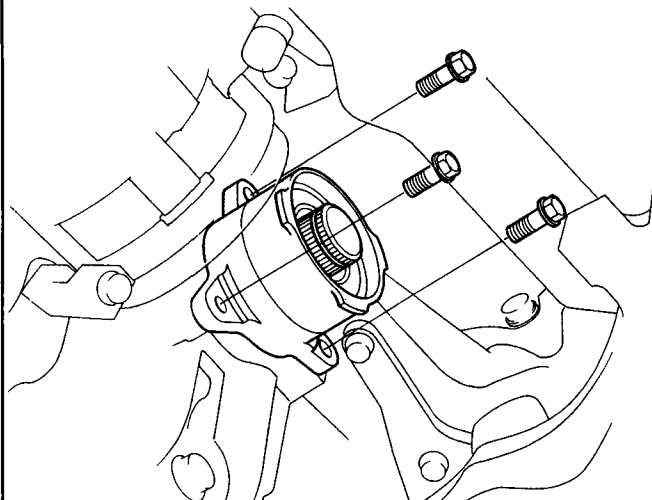

4. Remove the intermediate shaft assembly from the oil pan.

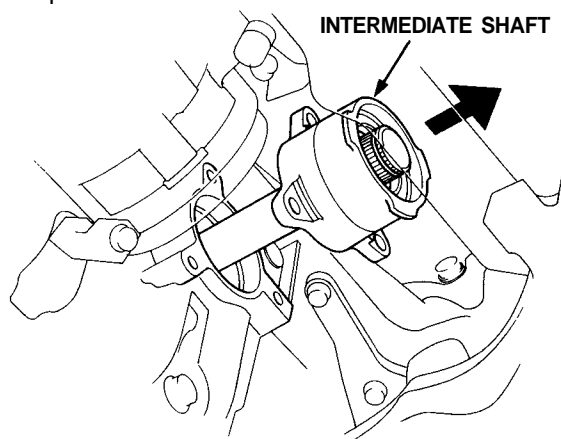

5. Install the intermediate shaft in the reverse order of removal.

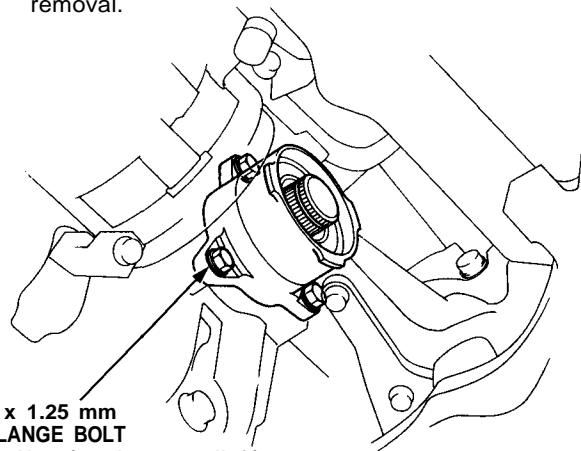


8 x 1.25 mm  
FLANGE BOLT  
22 N-m (2.2 kg-m, 16 lb-ft)


## Disassembly

**CAUTION:** The bearing support and support base are made of aluminum. Be careful not to damage them when servicing.

1. Remove the intermediate shaft outer seal from the bearing support.

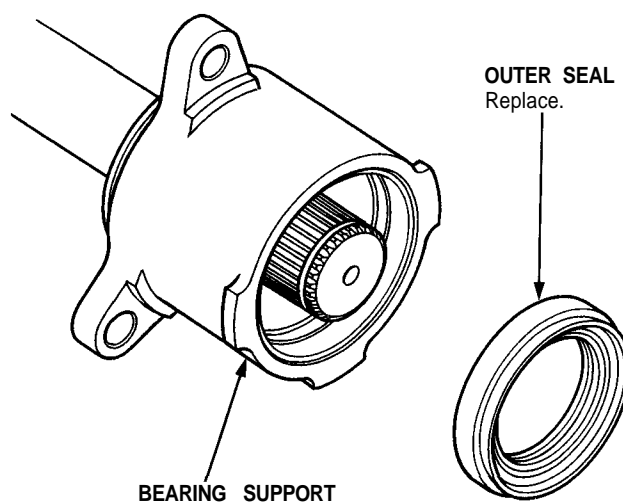

2. Remove the external circlip and the internal circlip.

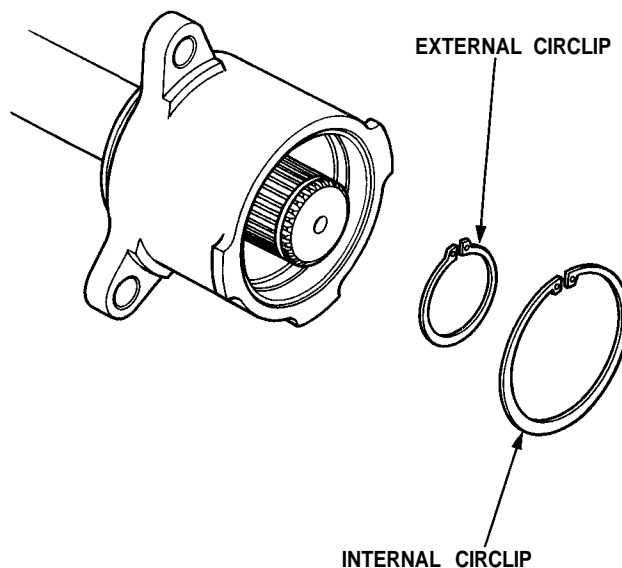

(cont'd)