



# Intermediate Shaft

## Reassembly

1. Press the intermediate shaft inner seal into the bearing support using the special tools and a press.

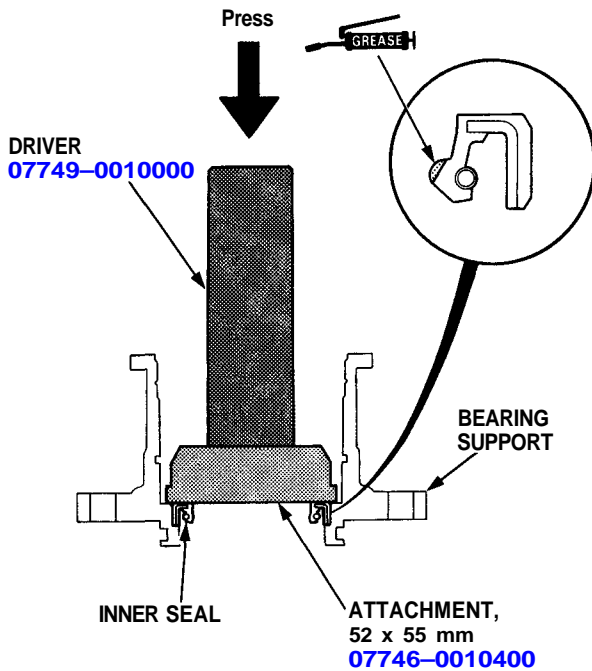


2. Press the intermediate shaft bearing into the bearing support using the special tool and a press.

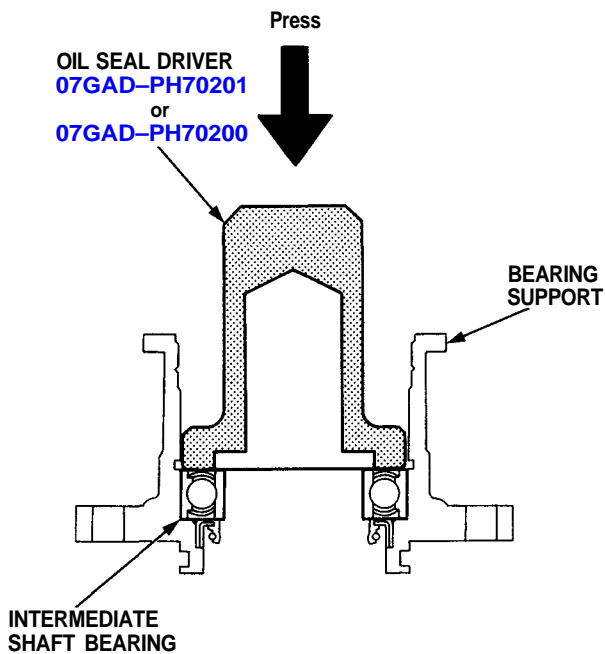

3. Seat the internal circlip in the groove of the bearing support.

**CAUTION:** Install the circlip with the tapered end facing out.

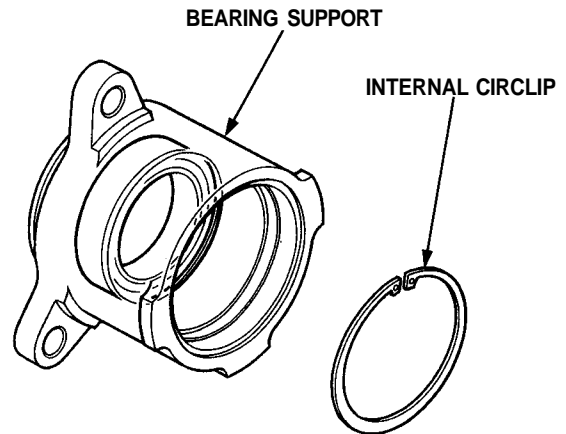

4. Press the intermediate shaft into the shaft bearing using the special tools and a press.

