




Steering Pump

Replacement


NOTE: Before disconnecting the hoses from the pump, place a suitable container under the car.

1. Drain the fluid from the system (see page 17-18).
2. Remove the air cleaner housing cover and intake air duct (see section 11).
3. Disconnect the inlet and outlet hoses from the pump and plug them.

NOTE: Take care not to spill the fluid on the body and parts. Wipe off the spilled at once.

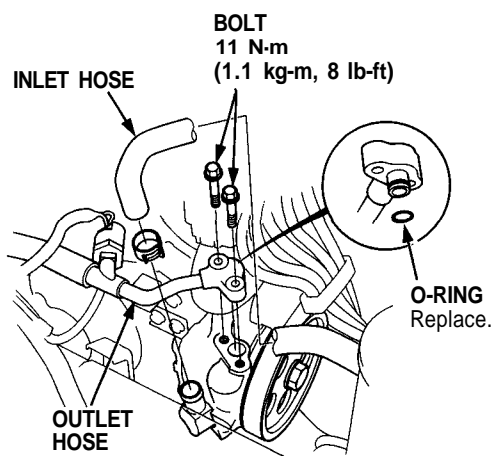


4. Remove the power steering pump belt by loosening the pump mounting bolt, nut and adjusting bolt.
5. Remove the pump mounting bolt and nut, then remove the pump.

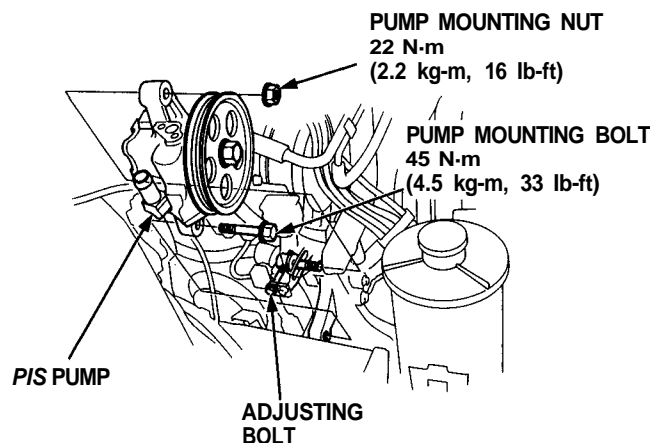

6. Loosely install a new pump on the bracket.
7. Connect the inlet and outlet hoses to the pump.
8. Install and adjust the power steering pump belt (page 17-17).

CAUTION:

- Make sure that the pump belt is securely on the groove of the pulleys.
 - Do not get power steering fluid or grease in the pump belt or pulley faces.
- Clean off any fluid or grease before installation.

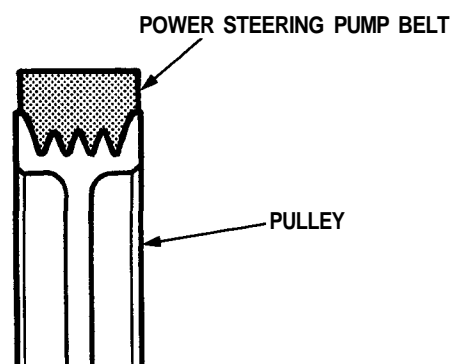

9. Fill the reservoir with new fluid to the UPPER LEVEL on the reservoir (see page 17-18).