

Steering Gearbox

Illustrated Index

CAUTION:

- Before disassembling the gearbox, wash it off with solvent and a brush.
- Thoroughly clean all disassembled parts.
- Always replace O-rings and seals.
- Replace parts with damaged sliding surfaces.
- Do not dip seals and O-rings in solvent; coat O-rings with grease or power steering fluid, make sure they stay in position during reassembly, and use appropriate special tools to install them where necessary.

-  **STEERING GREASE** (Part Number 08733 — B070E)

