

**⚠ WARNING** The accumulator contains high-pressure nitrogen gas, do not puncture, expose to flame or attempt to disassemble the accumulator or it may explode; severe personal injury may result.

## MODULATOR UNIT

Replacement, page [19-78](#)  
 Index/Torque, page [19-80](#)  
 Solenoid Leak Test, page [19-81](#)

## HYDRAULIC SYSTEM

Relieving Accumulator/  
 Line Pressure, page [19-77](#)

## MASTER CYLINDER

Index/Torque, page [19-13](#)  
 Inspection, page [19-14](#)

## ABS CONTROL UNIT

Replacement, page [19-85](#)

## BRAKEBOOSTER

Tests, page [19-15](#)  
 Pushrod Clearance Adjustment,  
 page [19-16](#)

## UNDER-HOOD RELAY BOX C (Fail-safe Relays)

## PUMP ASSEMBLY

Index/Torque, page [19-82](#)

## FRONT WHEEL SENSOR

Inspection, page [19-86](#)  
 Replacement, page [19-87](#)

## ABS INSPECTION CONNECTOR (6P)

(Under the passenger's seat)

## UNDER-HOOD FUSE/RELAY BOX (Motor Relay)

## REAR WHEEL SENSOR

Inspection, page [19-86](#)  
 Replacement, page [19-87](#)

