

Troubleshooting

Symptom-to-System Chart

DIAGNOSTIC TROUBLE CODE (DTC)		PROBLEMATIC COMPONENT/ SYSTEM	AFFECTED				PAGE	OTHER COMPONENT	PAGE
MAIN CODE	SUB-CODE		FRONT RIGHT	FRONT LEFT	REAR RIGHT	REAR LEFT			
①	—	ABS pump motor over-run	—	—	—	—	19-53	Solenoid ABS pump motor Pressure switch	19-81
	②	ABS pump motor circuit problem	—	—	—	—	19-55	ABS motor relay ABS unit fuse ABS motor fuse	19-85
	③	High pressure leakage	—	—	—	—	19-58	Solenoid(s)	
	④	Pressure switch	—	—	—	—	19-59		
	⑧	Accumulator gas leakage	—	—	—	—	19-60		
②	①	Parking brake switch-related problem	—	—	—	—	19-60	Brake fluid level switch Brake system light	
③	①	Pulser(s)	○				19-86	Wheel sensor installation	
	②			○					
	④				○	○			
④	①	Wheel sensor(s)	○				19-61		
	②			○					
	④				○				
	⑧					○			
⑤	—	Wheel sensor(s)			○	○	19-63	Modulator Rear brake drag	
	④				○				
	⑧					○			
⑥	—	Fail-safe relay(s)	○			○	19-65		19-85 (Function Test)
	①		○						
	④					○			
⑦	①	Solenoid related problem	○				19-71	ABS B3 (15 A) fuse	
	②			○				ABS B1 (15 A) fuse	
								Front fail-safe relay	
	④				○	○		Rear fail-safe relay	