



# Diagnostic Trouble Code (DTC) 1-4: Pressure Switch Circuit

**CAUTION:** Use only the digital multimeter to check the system.

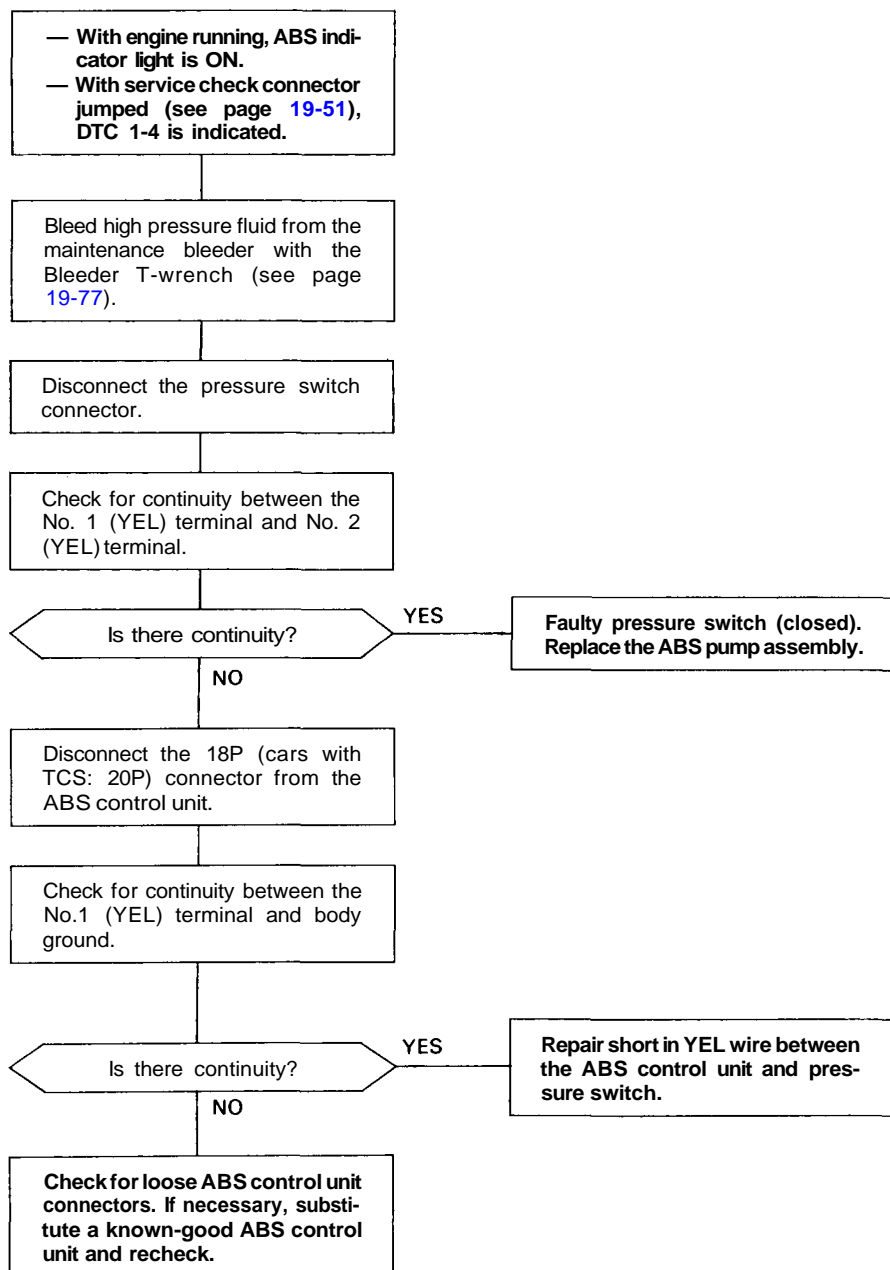


PRESSURE SWITCH CONNECTOR

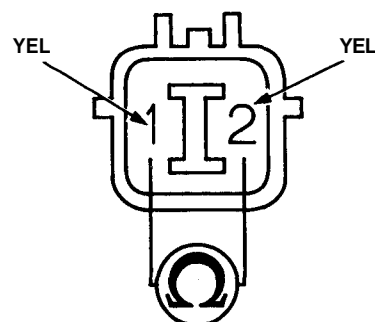

Continuity?

View from terminal side.

PRESSURE SWITCH CONNECTOR

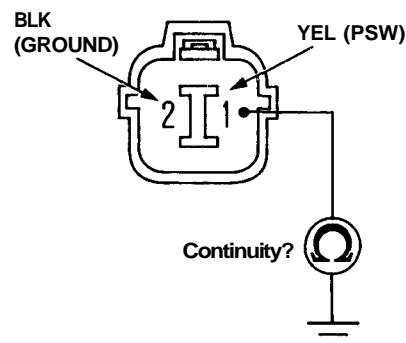

Continuity?

View from terminal side.

(cont'd)