


Diagnostic Trouble Codes (DTCs) 5 to 5-8: Wheel Sensor(s)

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The ABS indicator light comes ON after restarting the engine until the DTC is erased (by disconnecting the ABS B2 (15 A) fuse in the under-hood fuse/relay box for three seconds).

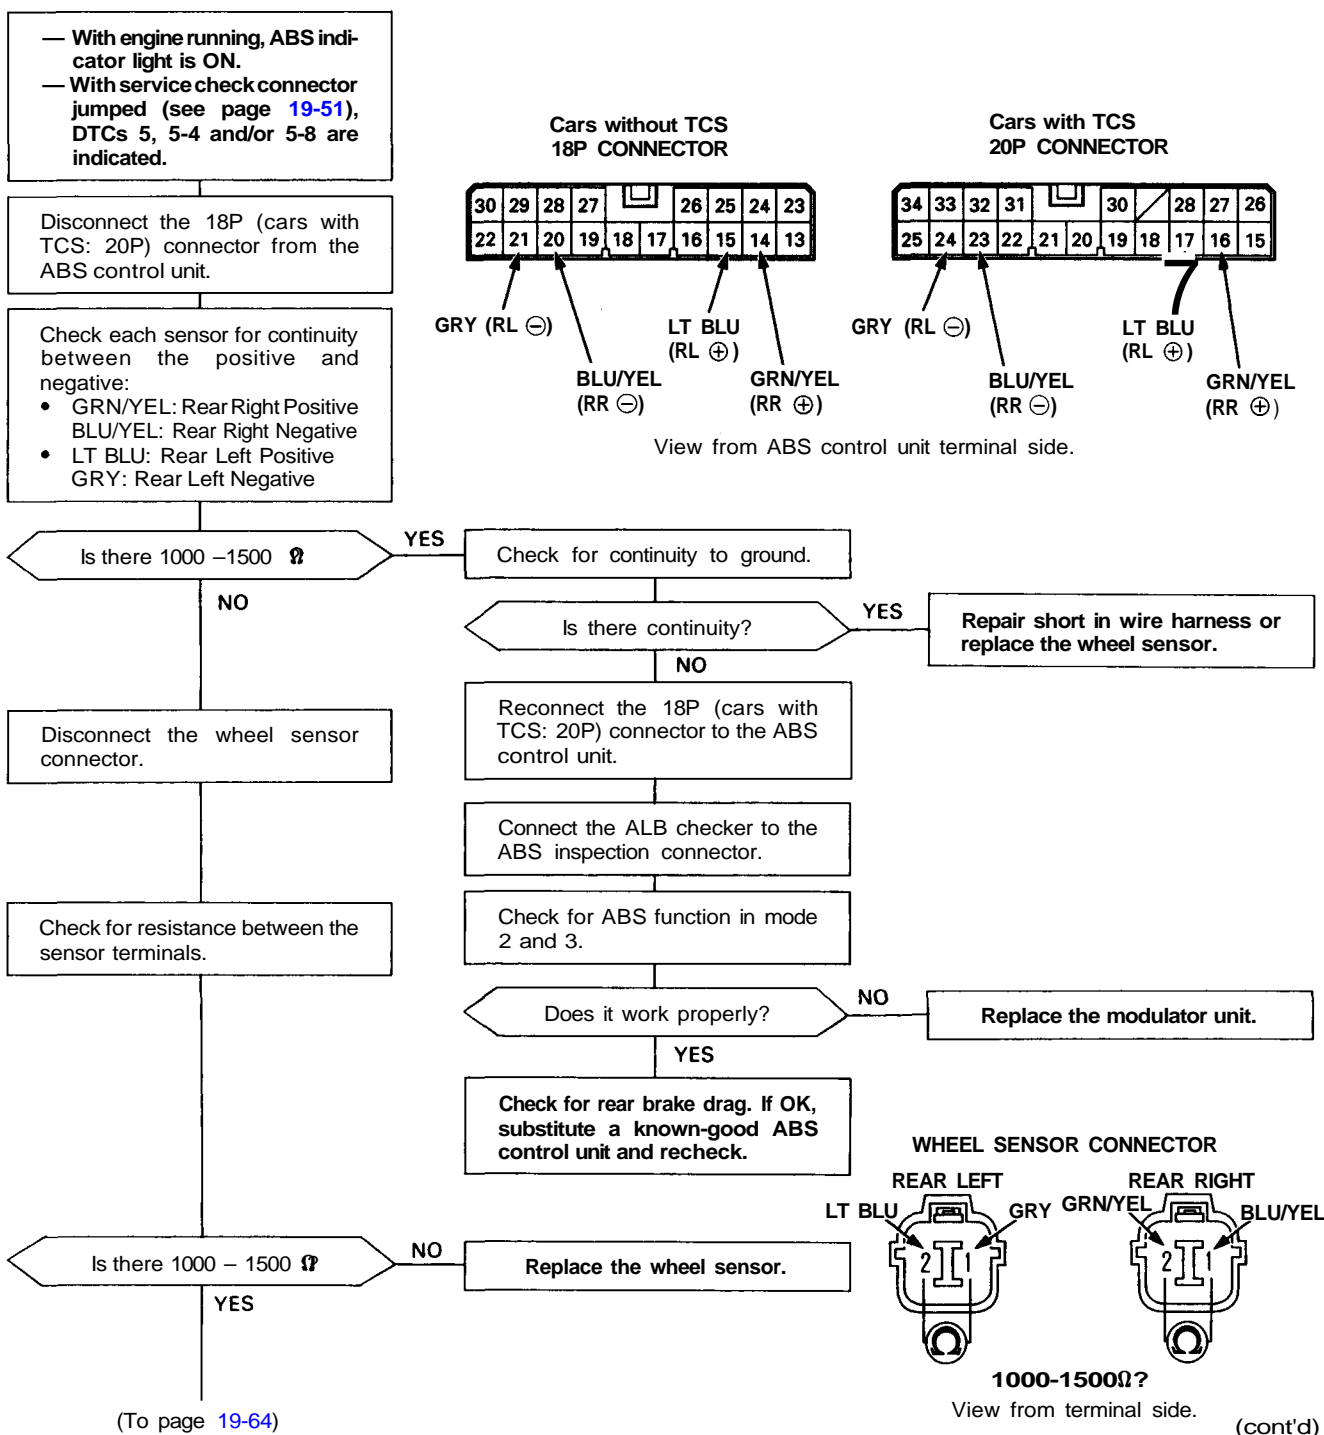

Troubleshooting

Flowcharts (cont'd)

(From page 19-63)

Reconnect the 18P (cars with TCS: 20P) connector from the ABS control unit.

Check each wire for continuity between the wheel sensor harness side terminals and body ground.

Is there continuity?


NO

Repair open in wire harness.

YES

Check for loose ABS control unit connectors. If necessary, substitute a know-good ABS control unit and recheck.

Positive: Less than $3.8\text{ k}\Omega$ is OK.
Negative: Less than $1\ \Omega$ is OK.

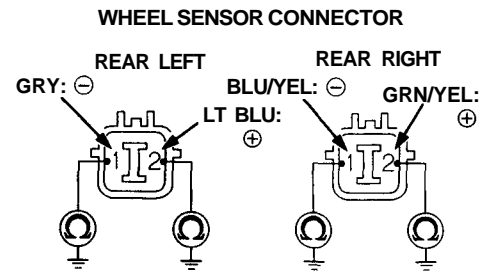

Continuity?

View from terminal side.