


# Electronic Components

## ABS Control Unit Replacement

1. Remove the rear seat back.
2. Remove the mounting bolts, then remove the ABS control unit.

### CAUTION:

- When the control unit mounting bolts are removed, the control unit's memory is cleared.
- Handle the control unit with care. Do not drop it.

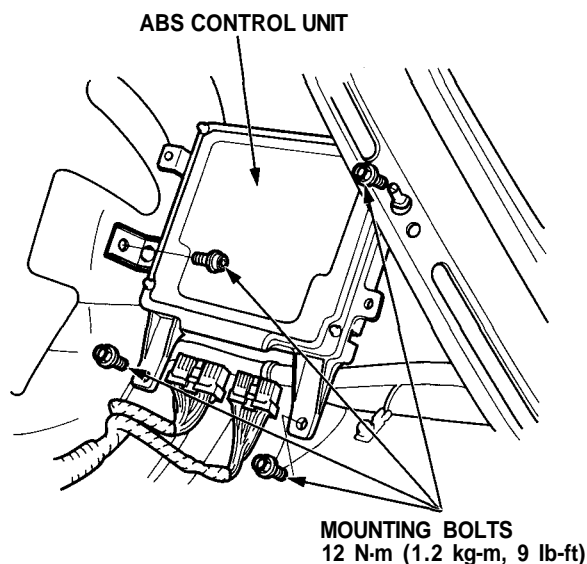


3. Installation is the reverse order of removal.

NOTE: After installation, turn the ignition switch on and check the ABS indicator light for operation.

## Relay Inspection

1. Remove the fail safe-relay from the relay box C (location: see page 19-31).
2. Check for continuity between the terminals A and B. There should be no continuity.
3. Connect a 12 V battery across the terminals C and D. There should be continuity between the terminals A and B.

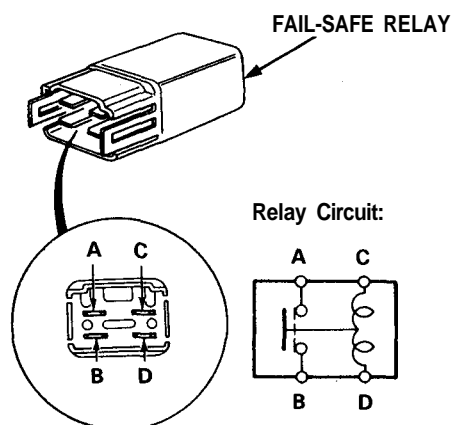

4. Remove the motor relay from the under-hood relay/fuse box (location: see page 19-31).
5. There should be continuity between the C and D terminals.
6. There should be continuity between the A and B terminals when the battery is connected to C and D. There should be no continuity when the battery is disconnected.

