



## Throttle Position (TP) Sensor

### Diagnostic Trouble Code (DTC) 3-6: Throttle position (TP) sensor

NOTE: If the Malfunction Indicator Lamp (MIL) indicator code 7 or **D4** indicator light indicates code 3, refer to the appropriate troubleshooting flowchart.

