


Doors

Outer Handle Replacement

NOTE: Raise the glass fully.

1. Remove:


- Door panel (see page 20-4)
- Plastic cover (see page 20-5)
- Rear channel

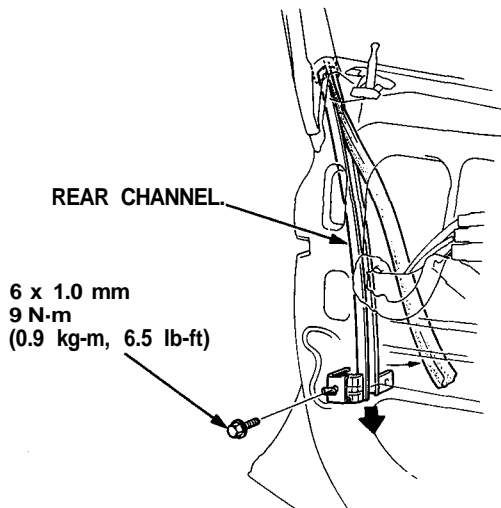

2. Disconnect the connector and harness clip.


3. Remove the access hole seal and mounting bolt, then remove the holder from the handle base. Pry the outer handle rod out of its joint using a flat tip screwdriver.

NOTE: To ease reassembly, note the location (A) of the outer handle rod on the joint before disconnecting it.

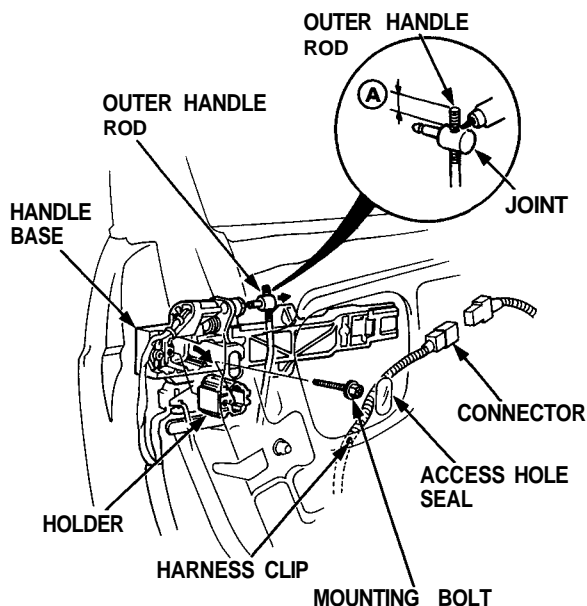


4. Remove the screw cover while pulling the outer handle.

5. Remove the outer handle by sliding it backward and pulling out from the handle base.

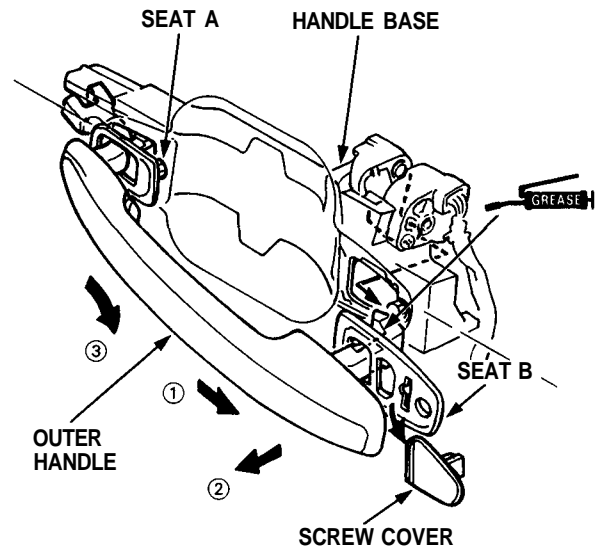


6. Loosen the mounting bolts and remove the handle base by sliding it forward.

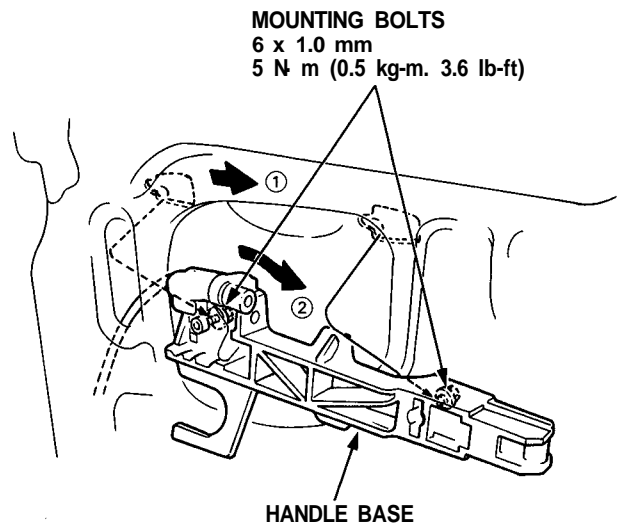




7. Pull out the retainer clip, remove the lock cylinder and cylinder base.

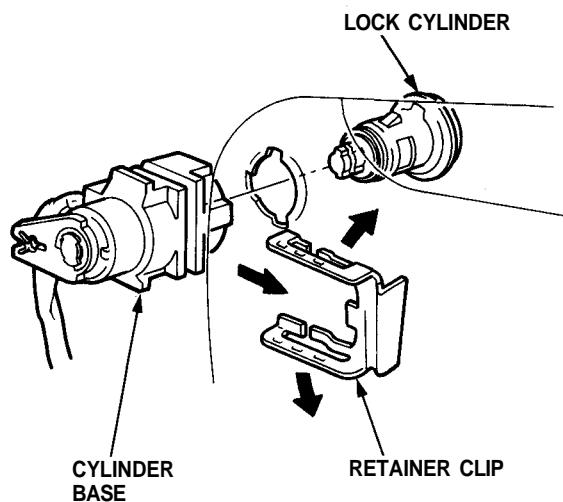

8. Installation is the reverse of the removal procedure.

NOTE: Make sure wire harness is routed and fastened properly.

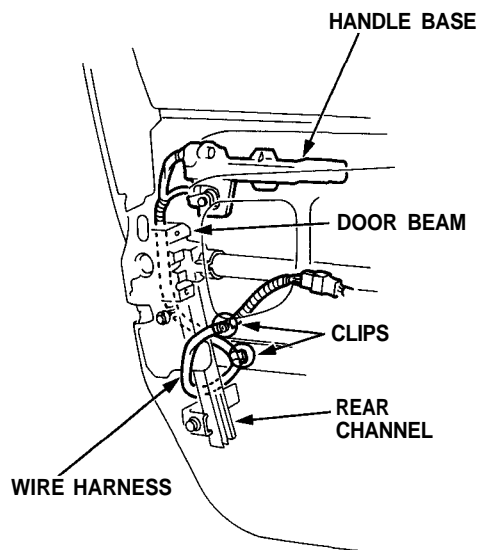


Latch Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-4)
 - Plastic cover (see page 20-5)
 - Rear channel (see page 20-8)
2. Pry the outer handle rod and cylinder rod out of its joint using a flat tip screwdriver. Disconnect the connectors and detach them from the door. Remove the mounting screws and nut, then remove the latch through the hole in the door.

NOTE:

- Take care not to bend the inner handle cable.
- To ease reassembly, note the location (A) of the outer handle rod on the joint before disconnecting it.

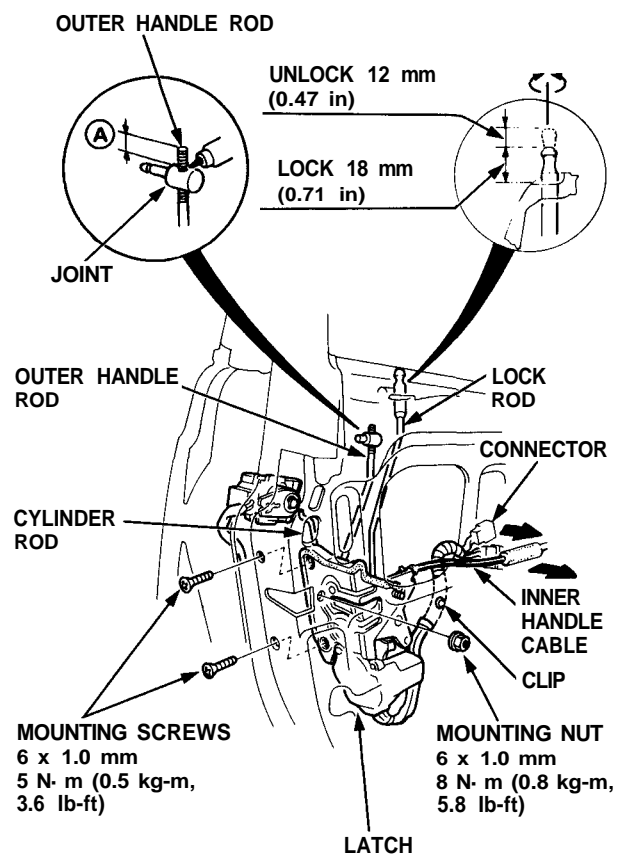

3. Installation is the reverse of the removal procedure.