




Inner Trim Replacement

NOTE: Lower the glass fully.


1. Remove the door panel (see page 20-4).
2. Remove the screws, then remove the front and rear inner trim.

NOTE:

- Take care not to scratch the front and rear inner trim.
- Remove the inside clips from inner weatherstrip side.

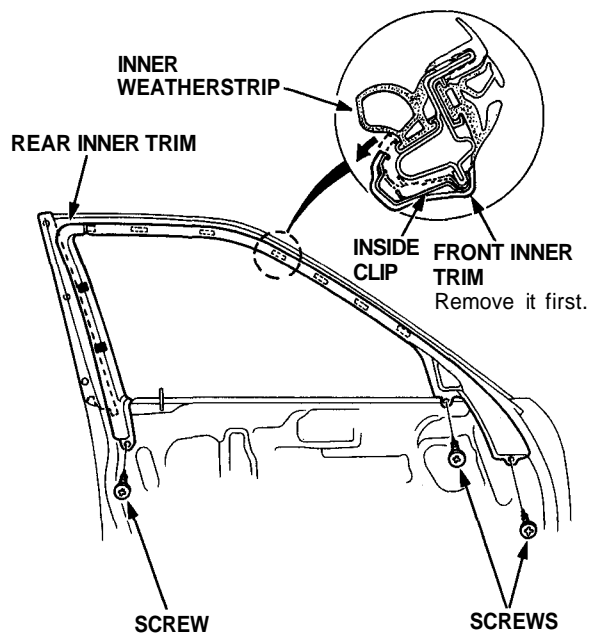

■ : Clip locations, 2 □ : Clip locations, 6

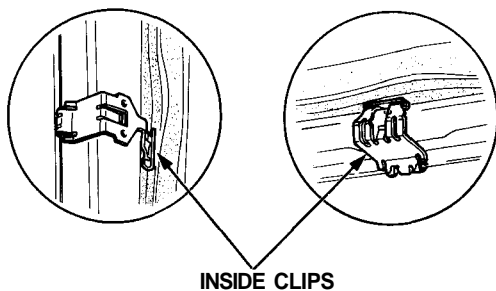

INSIDE CLIPS


3. Installation is the reverse of the removal procedure.

Weatherstrip Replacement

A▷: Clip locations, 25



B▷: Clip location, 1

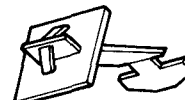

C▷: Clip locations, 2




D▷: Clip location, 1



▶: Plug locations, 2




Rust-prevention treatment access plug

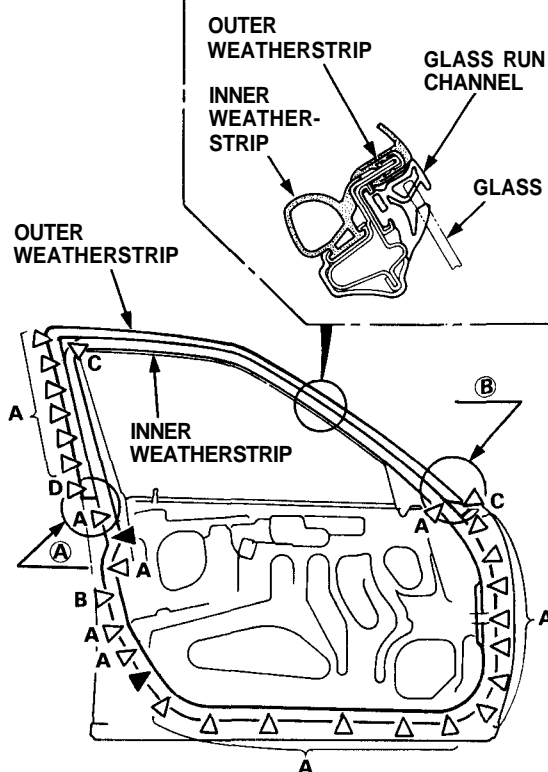


*: 40 mm (1.57 in)

Sealant: Cemedine #8500

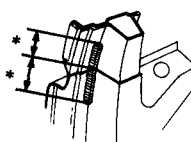

VIEW A

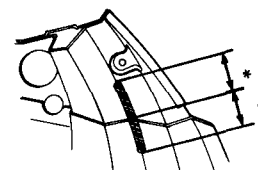

VIEW B

NOTE:

- Before installing the inner weatherstrip, apply clear sealant to the shadowed areas of the door as shown.
- If necessary, replace any damaged clips.