




Door Panel/Plastic Cover Replacement

1. Remove the trim plate, then remove the screws.


CAUTION: When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

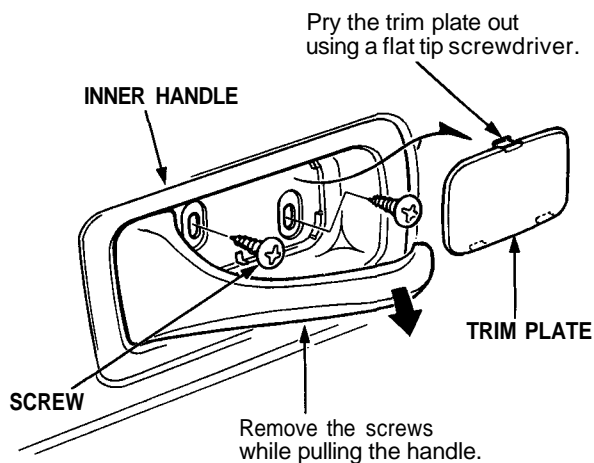

NOTE: Do not remove the inner handle from the door panel.


2. Remove the screws and clips (see trim pad remover page 20-4) attaching the door panel. Remove the door panel by pulling it upward and disconnect the inner handle cable. Disconnect the connectors.
 - Power window switch connector
 - Courtesy light connector
 - Ashtray light

NOTE: Remove the door panel with as little bending as possible to avoid creasing or breaking it.

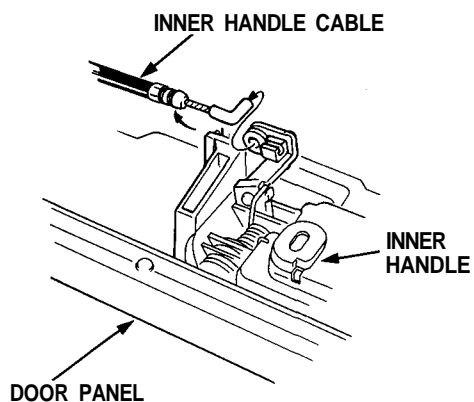


●: Clip locations, 6

●: Grommet locations, 2

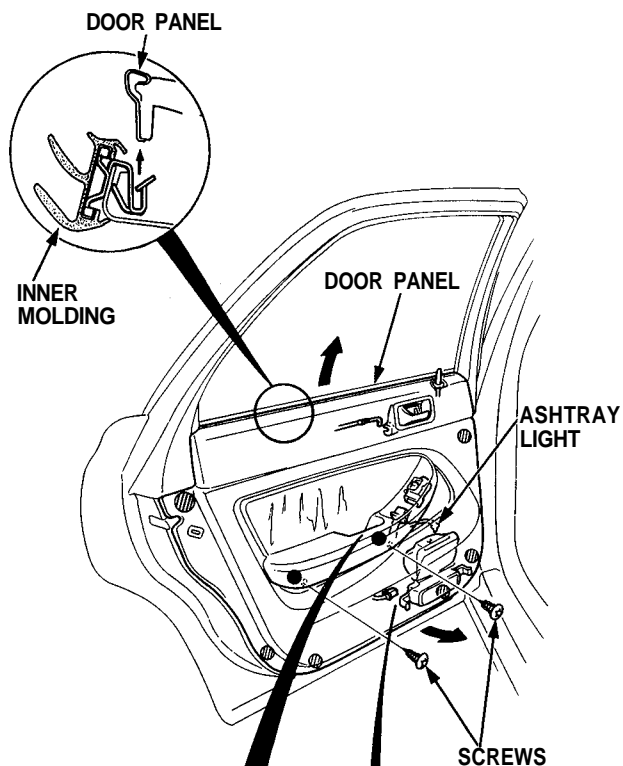


POWER WINDOW SWITCH CONNECTOR

Push here.

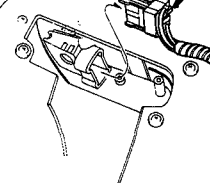

COURTESY LIGHT CONNECTOR

Push here.

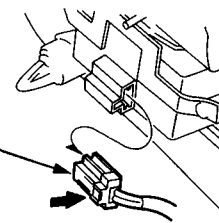


(cont'd)

Doors


Door Panel/Plastic Cover Replacement (cont'd)

3. If necessary, remove the armrest, ashtray and inner handle from the door panel.

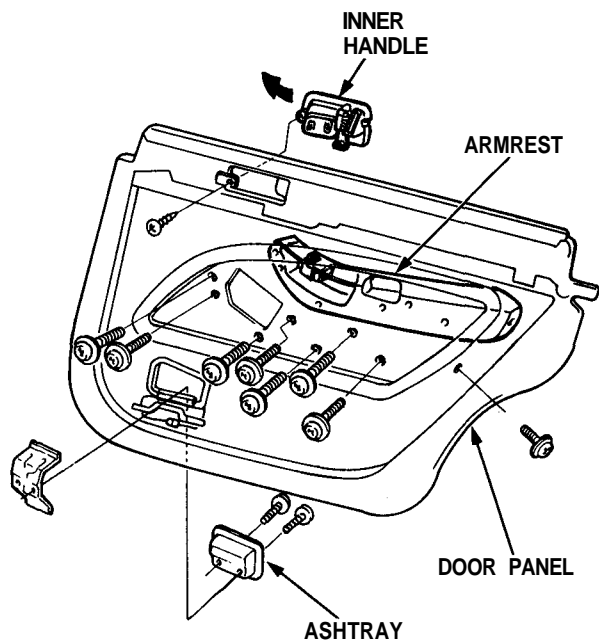

4. Remove the grommets and carefully remove the plastic cover.

NOTE: When removing the grommets, use a trim pad or clip remover.

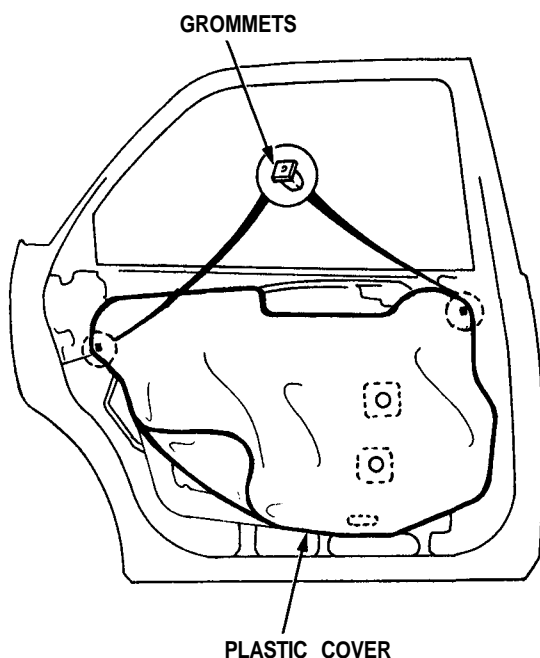


5. Install the door panel and plastic cover in the reverse order of removal.


NOTE:

- Make sure the door harnesses and connectors are fastened correctly on the door.

●: Clip locations

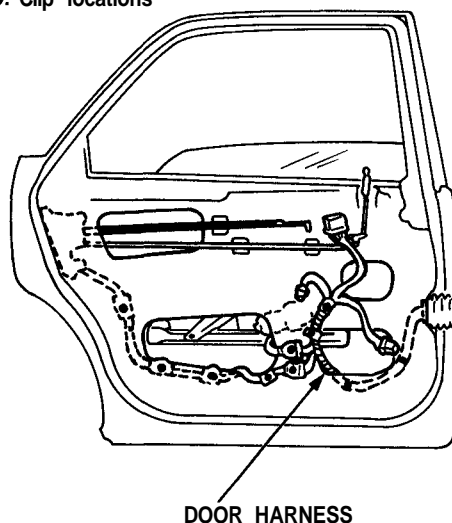

- Apply adhesive along the edge where necessary to maintain a continuous seal and prevent water leaks.

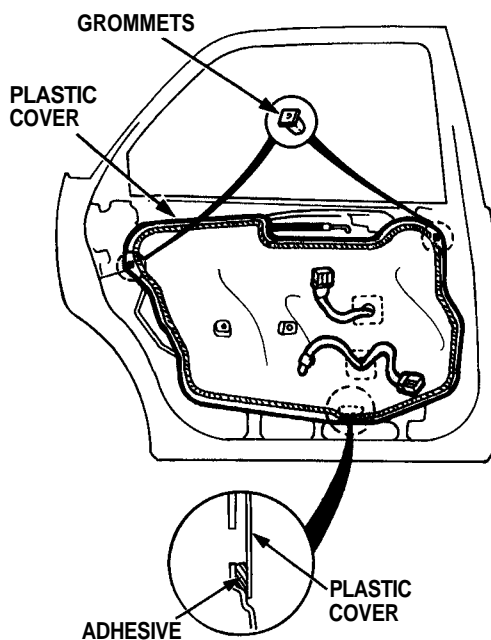

- Before tightening the door panel mounting screws, make sure the door harnesses are not pinched.