



Outer Handle Replacement

NOTE: Raise the glass fully.

1. Remove:
 - Door panel (see page 20-13)
 - Plastic cover (see page 20-14)
 - Rear channel (see page 20-17)

5 x 0.8 mm
8 N·m (0.8 kg-m, 5.8 lb-ft)


INNER TRIM

GLASS RUN CHANNEL


REAR CHANNEL

5 x 0.8 mm
8 N·m (0.8 kg-m,
5.8 lb-ft)

2. Remove the latch (see page 20-16).
3. Remove the mounting bolt, then remove the holder from the handle base.

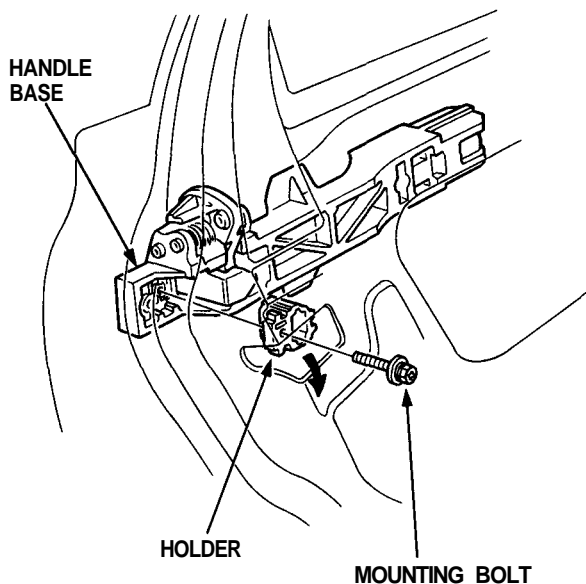


4. Remove the screw cover while pulling the outer handle.
5. Remove the outer handle by sliding it backward and pulling out from the handle base.

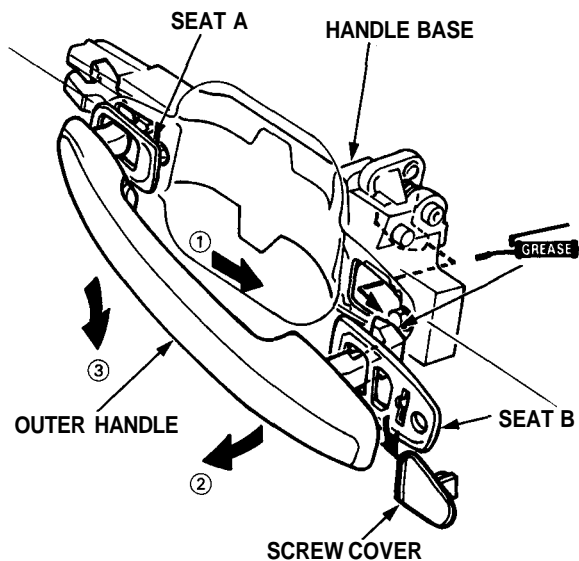

6. Loosen the mounting bolts and remove the handle base by sliding it forward.

MOUNTING BOLTS
6 x 1.0 mm 5 N·m
(0.5 kg-m, 3.6 lb-ft)

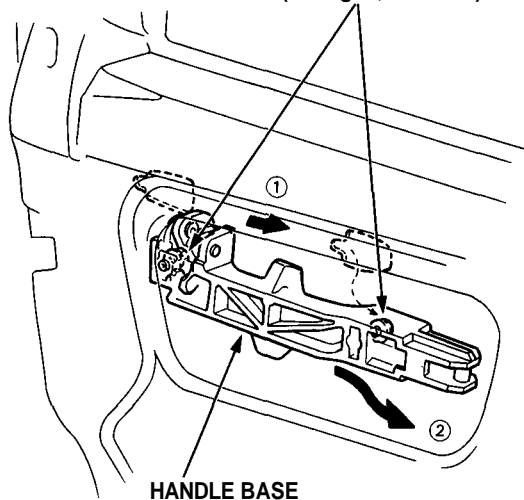

7. Installation is the reverse of the removal procedure.