


# Doors

## Latch Replacement

NOTE: Raise the glass fully.


1. Remove:
  - Door panel (see page 20-13)
  - Plastic cover (see page 20-14)
  - Rear channel (see page 20-17)
2. Disconnect the lock rod from the latch side. Remove the screw and detach the lock rod, then remove the lock crank.

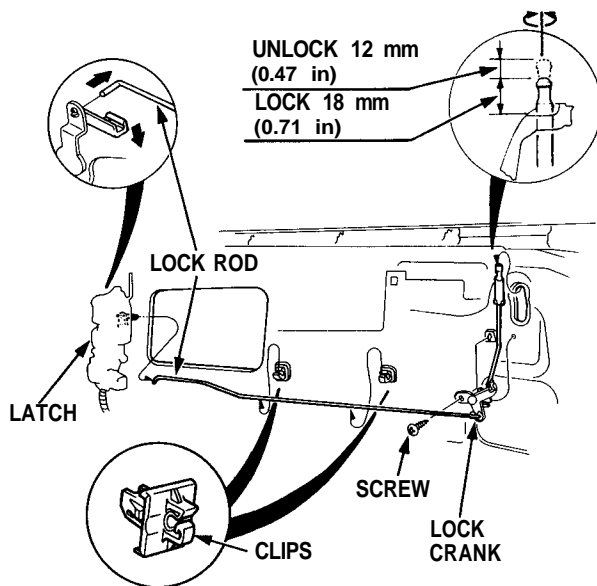

3. Pry the outer handle rod out of its joint using a flat tip screwdriver.
4. Remove the mounting screws and nut, then remove the latch through the hole in the door.

NOTE: Take care not to bend the inner handle cable.

NOTE: To ease reassembly, note the location (A) of the outer handle rod on the joint before disconnecting it.

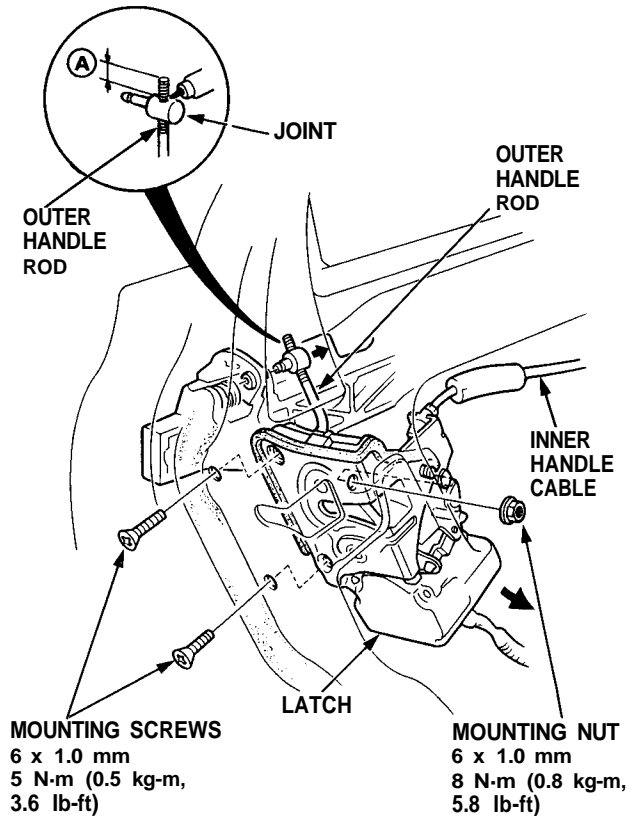

5. Installation is the reverse of the removal procedure.