

Doors


Inner Trim Replacement

NOTE: Lower the glass fully.

1. Remove the door panel (see page 20-13).
2. Remove the screws, then remove the front and rear inner trim.


NOTE:

- Take care not to scratch the front and rear inner trim.
- Remove the inside clips from inner weatherstrip side.

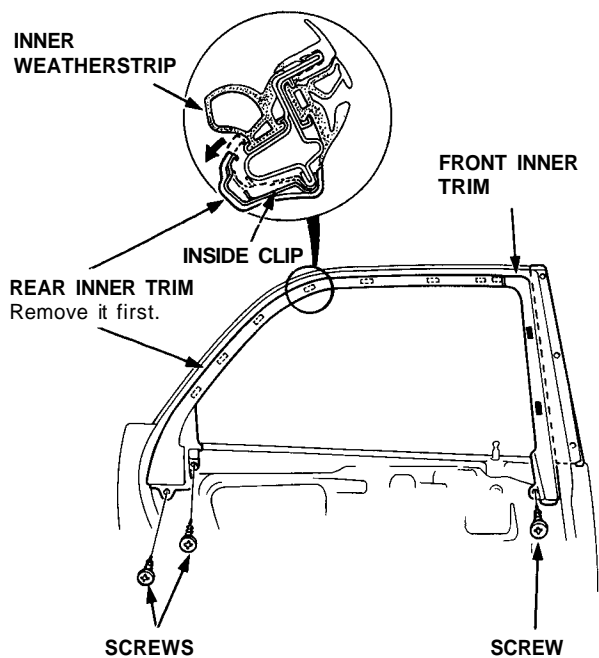

□ : Clip locations, 7

■ : Clip locations, 2

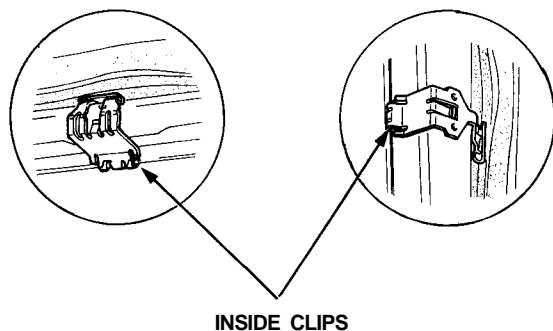


3. Installation is the reverse of the removal procedure.

Weatherstrip Replacement

A▷ : Clip locations, 24




B▷ : Clip location, 1

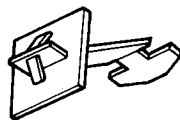

C▷ : Clip location, 1




D▷ : Clip location, 1

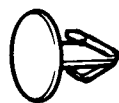

▶ : Plug locations, 2




Rust-prevention treatment access plug

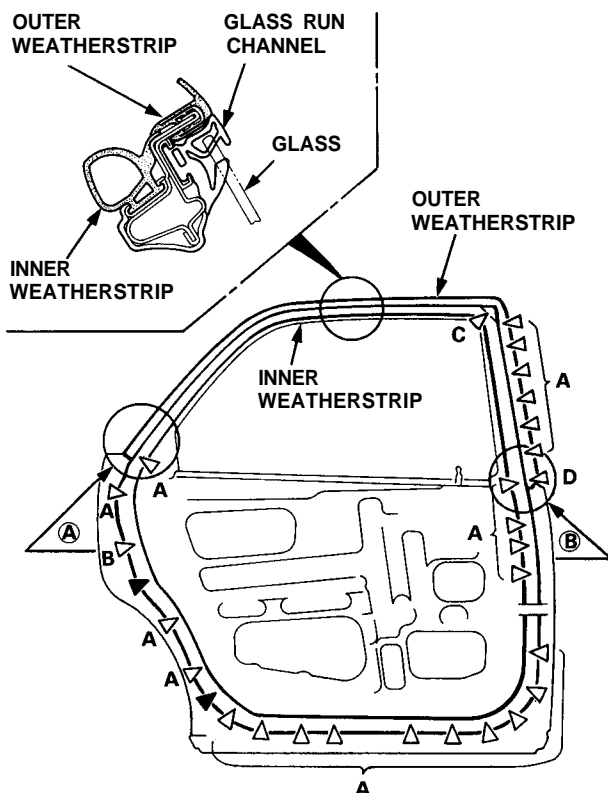


*: 40 mm (1.57 in)

Sealant: Cemedine #8500

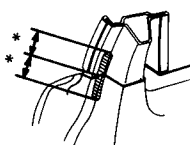

VIEW A

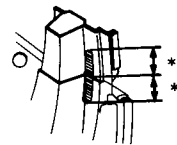

VIEW B

NOTE:

- Before installing the inner weatherstrip, apply clear sealant to the shadowed areas of the door as shown.
- If necessary, replace any damaged clips.